

NS SERIES

One-touch machine management

ONE TOUCH



» High-quality screen with 3-year warranty

» **Connect to any device**

» 'Drag & Drop' simplicity of Smart Active Parts

Total control at your fingertips

Omron's NS series looks like a normal HMI, but it is not. Designed on Smart Platform, the NS series provides enhanced communication even across multiple networks, to manage all devices in a machine for true industrial machine management. We provide functions to let you perform diagnoses and maintenance to make your machine competitive in an easy way. This is why we call it: one touch Machine Management. And that's why it's more than just an HMI terminal!

Outstanding connectivity

Used together with Omron PLCs and other field-programmable devices, such as temperature controllers and inverters, the NS series gives enhanced communication and programming capabilities, even across multiple networks, allowing you to manage all devices in your machine from a single terminal.

A built-in USB connection enables simple and fast connection of peripherals, while a built-in Ethernet interface allows fast connection to multiple PLCs and computers.

The NS series is also capable of connecting to many non-Omron devices to give you total flexibility in managing your machine.



Sysmac One

Machine management tool vs. HMI terminal

The NS HMI has, beside the generic HMI functions, many other functions to be able to use the NS as a real machine management tool. With the NS HMI you can configure, commission, maintain and operate many Omron devices and even third party devices. This means you can simple configure some settings, display errors or statuses, up- and download parameters all with the NS HMI terminal.

The NS HMI allows you to create and use the diagnostics functions for many devices you need to manage your machine. By providing diagnoses and maintenance functions on the NS, Omron allows a full insight into the machine's state and the flexibility to quickly troubleshoot on-site with minimum of work for the machine builder, system integrator or end-user.

Proven reliability

For over a decade Omron has been a global supplier of HMI solutions and high-reliability industrial touch-screen technology. Omron has supplied more than 500,000 pieces of HMI through more than 200 Omron Sales & Support offices world-wide, each offering after-sales support, service and training in local languages.



Integrated Machine Management: Sysmac One series

The Sysmac One series combine an NS touch screen with a powerful CJ1 PLC and the choice of different network interfaces in a compact housing occupying less panel space. Complete transparency enables the PLC, network (including field devices) and HMI to be accessed via a single port – a big advantage when servicing your machine remotely. With the Sysmac One you get the best of both worlds: One touch Machine Management HMI and the flexible, fast and easiest logic controller in the market.



Smart Platform

Omron's Smart Platform concept enables complete machine and plant automation from one single platform without having to worry about field buses, integration of various software and above all without being locked into one dominant supplier. Smart Platform will minimize the time and effort you spend on automation.

<http://smartplatform.info/>



NS Series Portfolio

Advanced HMI – NS					
					
Model	NS12	NS10	NS8	NS5	NS5 Handheld
Display	12.1 inch TFT colour	10.4 inch TFT colour	8.4 inch TFT colour	5.7 inch Monochrome or STN/TFT colour	5.7 inch STN colour
Resolution	800×600 pixels	640×480 pixels	640×480 pixels	320×240 pixels	320×240 pixels
Number of colours	256 (32,768 for image data)	256 (32,768 for image data)	256 (32,768 for image data)	Monochrome 16 grey-scales, STN/TFT 256 colours (STN 4096, TFT 32,768 for image data)	256 colours (4096 colours for image data)
Memory Size	60MB screen memory, 32,768 words + 32,768 bits internal memory and 8192 words + 8192 bits retentative memory	60MB screen memory, 32,768 words + 32,768 bits internal memory and 8192 words + 8192 bits retentative memory	60MB screen memory, 32,768 words + 32,768 bits internal memory and 8192 words + 8192 bits retentative memory	60MB screen memory, 32,768 words + 32,768 bits internal memory and 8192 words + 8192 bits retentative memory	60MB screen memory, 32,768 words + 32,768 bits internal memory and 8192 words + 8192 bits retentative memory
Options	Ethernet, Controller Link, Video input board (RGB/Composite)	Ethernet, Controller Link, Video input board (RGB/Composite)	Ethernet, Video input board (RGB/Composite)	Ethernet	RS-232 or RS-422 communication depending on cable
Size in mm (HxWxD)	241×315×48.5	241×315×48.5	177×195×48.5	142×195×54	176×223×70.5 (excl. emergency button)

HMI & Control – SYSMAC One				
				
Model	NSJ12	NSJ10	NSJ8	NSJ5
Display	12.1 inch colour TFT	10.4 inch colour TFT	8.4 inch colour TFT	5.7 inch colour TFT or STN
Display Size / Resolution	246×184.5 mm (800×600 pixels)	215.5×162.4 mm (640×480 pixels)	170.9×128.2 mm (640×480 pixels)	117.2×88.4 mm (320×240 pixels)
Control	CJ1G-CPU45H; 60k-steps program memory, 128k-words data memory, logic instruction time 0.04 µs	CJ1G-CPU45H; 60k-steps program memory, 128k-words data memory, logic instruction time 0.04 µs	CJ1G-CPU45H; 60k-steps program memory, 128k-words data memory, logic instruction time 0.04 µs CJ1M-CPU13; 20k-steps program memory, 32k-words data memory, logic instruction time 0.04 µs	CJ1G-CPU45H; 60k-steps program memory, 128k-words data memory, logic instruction time 0.04 µs CJ1M-CPU13; 20k-steps program memory, 32k-words data memory, logic instruction time 0.04 µs
Communication	DeviceNet Master/Slave or PROFIBUS Master and optional Ethernet interface	DeviceNet Master/Slave or PROFIBUS Master and optional Ethernet interface	DeviceNet Master/Slave or PROFIBUS Master and optional Ethernet interface	DeviceNet Master/Slave or PROFIBUS Master and optional Ethernet interface
Expansion (1 board max.)	Ethernet, Controller Link, I/O extension	Ethernet, Controller Link, I/O extension	Ethernet, Controller Link, I/O extension	Ethernet, Controller Link, I/O extension
Size in mm (HxWxD)	Without expansion unit 241×315×73.3 With expansion unit 241×315×89.3	Without expansion unit 241×315×73.3 With expansion unit 241×315×89.3	Without expansion unit 177×232×73.3 With expansion unit 177×232×89.3	Without expansion unit 195×142×79 With expansion unit 195×142×95

Unlike conventional visualization objects, Smart Active Parts communicate, across multiple networks, with their corresponding devices. They can be used to configure, commission, operate and maintain these devices, without a single line of code needed to be written in the PLC or the HMI. This allows you to add powerful functionality to your application within minutes.



Using Smart Active Parts: just a few simple steps

Dramatically reduces the effort required to create ladder programming and screens.

A library with more than 2,000 Smart Active Parts is available, which can directly access OMRON PLCs and other devices. You can drag & drop Smart Active Parts in an application in just 4 simple steps.

With Smart Active Parts you can for instance monitor device errors in understandable text, download parameters to devices and check Network statuses without the need for a computer with software tools.

Example screens using support tool objects (Tool Function SAP Library)

From Computer support tools

To

PLC CPU Unit monitoring screen

NCF Unit setting screen

DeviceNet monitoring screen

The SAP library also provides PLC I/O Unit Troubleshooter SAPs

Troubleshooter Smart Active Parts are available to troubleshoot specific PLC units. When an error occurs in an unit, the Troubleshooter SAP provides an easy-to-understand explanation of the cause of the error as well as which counter measures to take to resolve the error.

In this way you can quickly resolve errors on-site even without using documentation.

Troubleshooter SAP for a Position Control Unit

NC10 Unit Troubleshooter

Error code: 6000

Item name: Emergency stop input

Cause: An emergency stop signal input is received.

Method: At power ON, Data writing

Troubleshooter SAP for Basic I/O Unit

CS00 series Basic I/O Unit Troubleshooter

Error Display

Basic I/O Unit Error

I/O setting error

I/O setting error

I/O Overflow

I/O Bus Error

Communication Error

Power in the Basic I/O Unit is blown, Basic I/O Unit alarm output

Details: An error occurs in a data transfer between the CPU Unit and a Unit mounted to a slot.

Method: Try turning the power OFF and ON again. Turn the power OFF and check cable connections between the device if the error isn't corrected.


Rack Number: 0

Slot Number: 1

260,000-colour Video Display


Display the production steps on the HMI via optional video inputs!

Two kinds of video interfaces are available to connect to various applications. Provides compatibility with OMRON Vision Sensors (F150, F160, and F250) in addition to video and CCD camera connections. The NS-series HMI contain some useful functions like capturing and browsing images and operating the Console functions in the vision sensor.

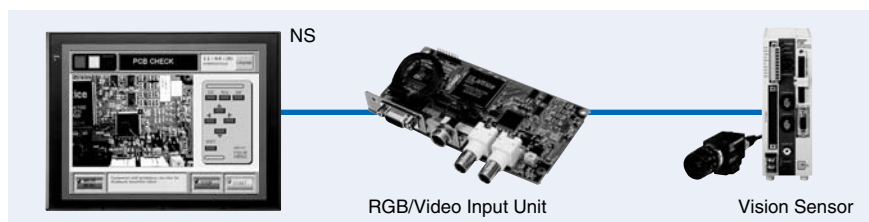


NS-CA001 Video Input Unit

Four video inputs or CCD cameras can be connected and up to four images can be displayed simultaneously if the image size is 320x240 pixels.

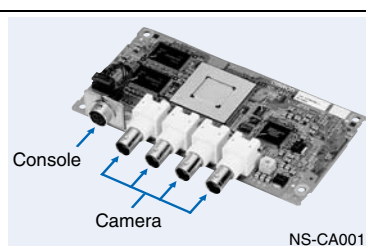

NS-CA002 RGB/Video Input Unit

There is an analog RGB input terminal in addition to the two video input terminals. Either the video signals or the analog RGB signal can be displayed on the NS-series HMI.

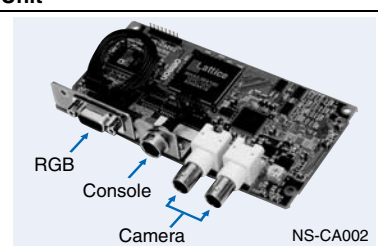


Single Port Multi Access (SPMA)

The PLC program and screen data can be transferred from a single port!

With SPMA you can transfer the PLC program and HMI project data with one cable connection. It does not even matter if you connect first to HMI or PLC, you can always transfer the data and keep on operating the HMI or PLC.

The HMI can transfer data across different network levels.


Computer (Serial/USB/Ethernet) → NS-series HMI (Ethernet) → PLC (Ethernet or Controller Link) → PLC

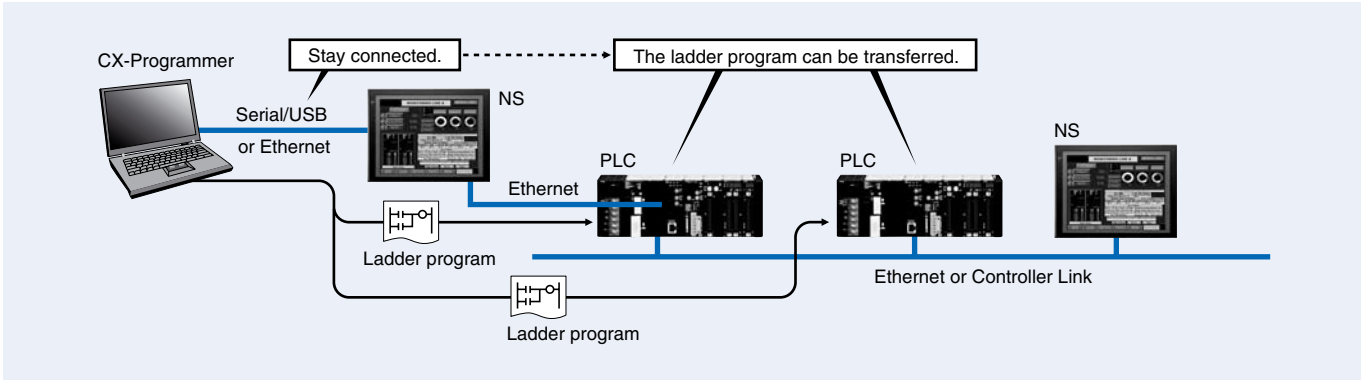

SPMA significantly improves maintenance efficiency when the NS-series HMI and PLC are connected over longer distances.

Computer (Serial/USB/Ethernet) → PLC (Serial, Ethernet or Controller Link) → NS-series HMI

Note: SPMA can be used in CS/CJ-series PLCs with lot number 030201 or later.

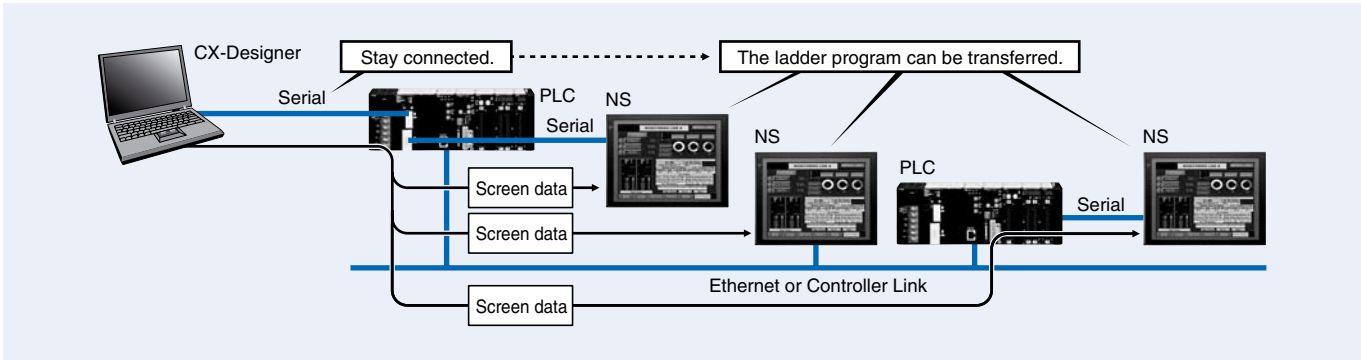


Direct Connection to Temperature Controllers and Inverters

Connect OMRON Temperature Controllers and Inverters to the NS-series HMI.

OMRON Temperature Controllers can be connected directly to the NS-series HMI RS-232C port. Data does not pass through the PLC, so ladder programming is not required. There are many SAPs in the Library for Temperature Controllers. Temperature Controller screens can be created easily just by pasting objects from the SAP Library onto the screens.


The Omron inverters can also be connected to the NS-series HMI. This makes it easy to read and change parameters for the inverters without any PLC programming.

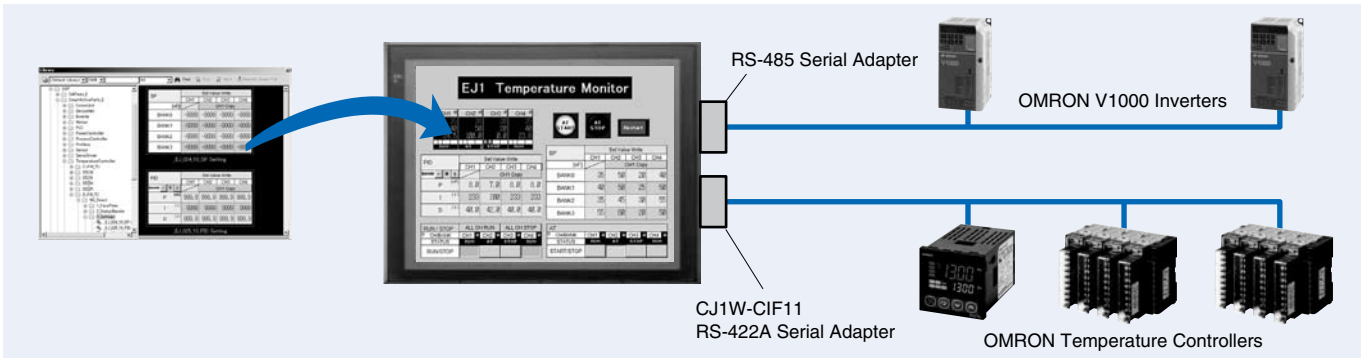

Exceptional Functionality

Easy maintenance with the Ladder Monitor


The NS HMI (except for the NS5 series) has a Ladder Monitor built in as a standard feature. A Ladder Monitor is an application that allows you to monitor the ladder program in the CS/CJ series PLC. With the Ladder Monitor you can monitor the execution status of the ladder program in the connected PLC without the need to use software (CX-Programmer). Many useful functions are provided with the Ladder Monitor like viewing I/O comments, monitor and change values, search addresses, easy navigation and capture ladder image.

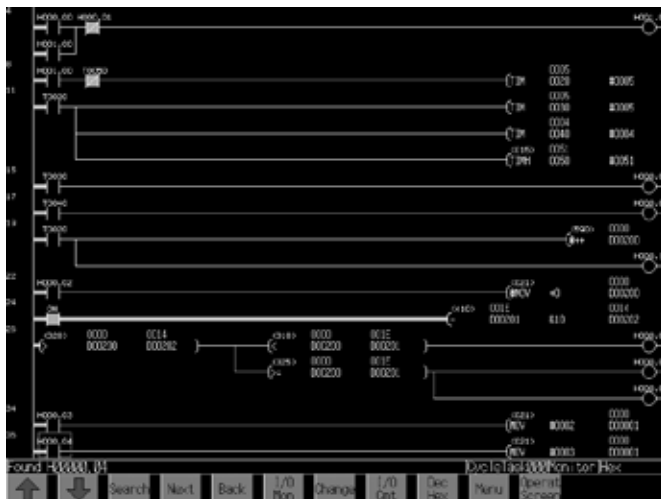

Easily utilizing advanced functions

Data block (Recipe) function

Data blocks (recipe function) allow several numeric values and/or character strings to be transferred to/from memory areas, such as PLC data areas. Data blocks can be used to change the system's production setup even faster.

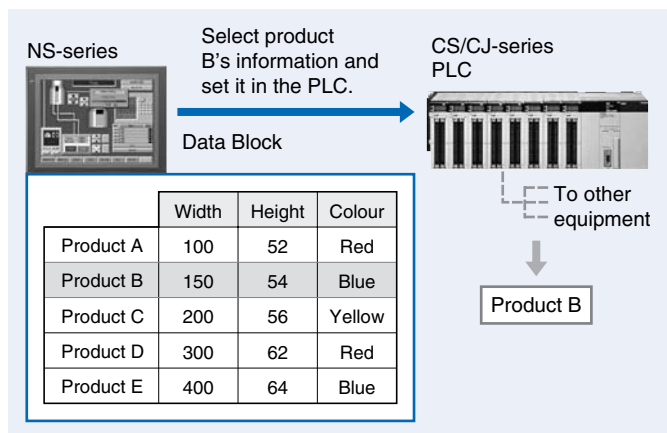

Communication drivers

The NS-series HMI can connect to several non-Omron devices. This means the NS HMI can have communication on one port to an Omron device and on the second port to a non-Omron device. Contact Omron for up-to-date information on the available communication drivers for the NS HMI series.



Macro functions

The NS provide an extensive set of macro functions that can be used to perform many different operations.

These functions allows the HMI to process screen display actions or calculate some data, which was performed by PLC before. Also the HMI project can be made more interactive using some macro functions in combination with PLC memory.

Macro functions can be used with screen pages, functional objects, like buttons and lamps or on specific timing operation.

In general we provide macro functions to perform the following actions using Conditional and Logical operations:


- Convert and manipulate data
- Read/Write data to a device
- Perform string manipulation
- Perform screen/popup operations
- Store/retrieve data from CF
- Set date/time
- Influence Screen navigation
- Perform loop operation

Trend Graphs & Data Logging


Easily log and display any data over time

A variety of graphing functions are built into the NS-series HMI, such as the trend graph, which can log data over a longer period of time, and the line graph, which can display overlapping graphs.

Logging data is stored as a CSV file in the Memory Card mounted in the NS-series HMI. The data stored in the Memory Card can be read or deleted from the screen.

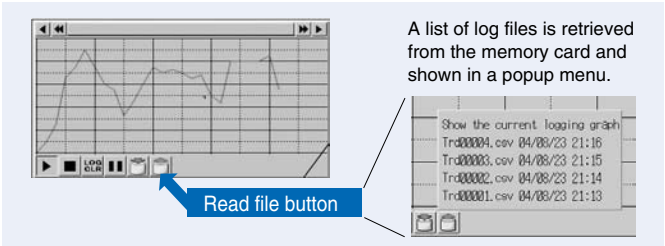


Log files can be saved automatically, just by selecting the Save the data periodically Option in the Data Log Setting Window.

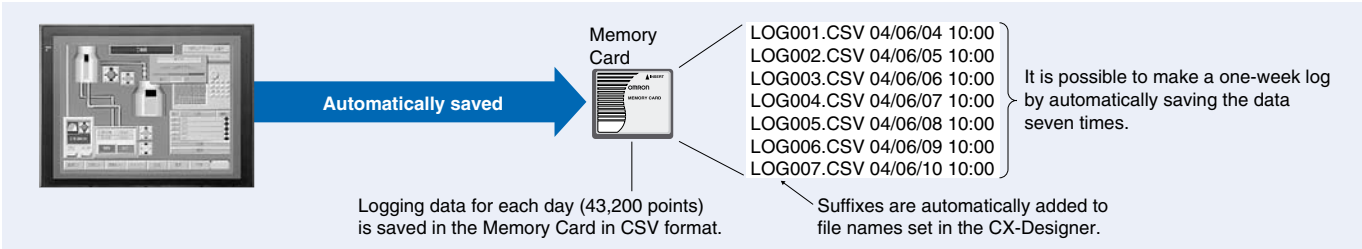


Trend Graph Function

Data stored/logged by the PLC can be displayed in overlapping graphs, so a device's operation can be compared for evaluation and analysis. In addition, up to 1,000 words of consecutive data can be displayed as a line graph, data can be displayed together, and any region can be magnified.

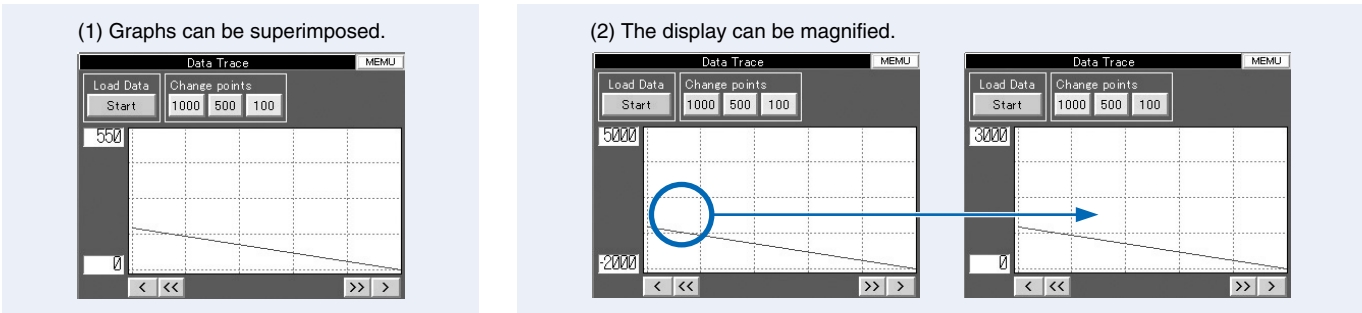


Continuous Line Graph

A graph can be plotted in any position by specifying the X and Y coordinates of the vertices. Also, the graph can be moved on the screen by specifying the movements from the PLC.

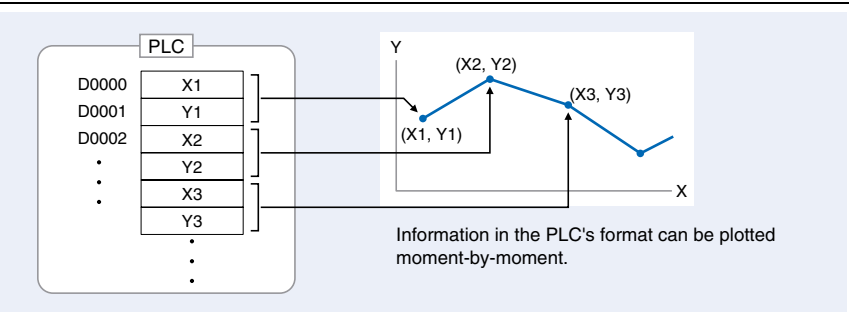

Diverse Network possibilities to fit any application

The NS-series provide very strong networking skills. With serial NT-Link communications supporting both 1:1 and 1:N connections you can connect multiple HMI's to the PLC. The NS-series HMI can also support communications with multiple PLCs and multiple HMI's through Controller Link and Ethernet connections, so the network can be configured freely to match the requirements and scale of the application. In addition, using the NS-*Runtime* makes it possible to monitor machine status and log data from the host.

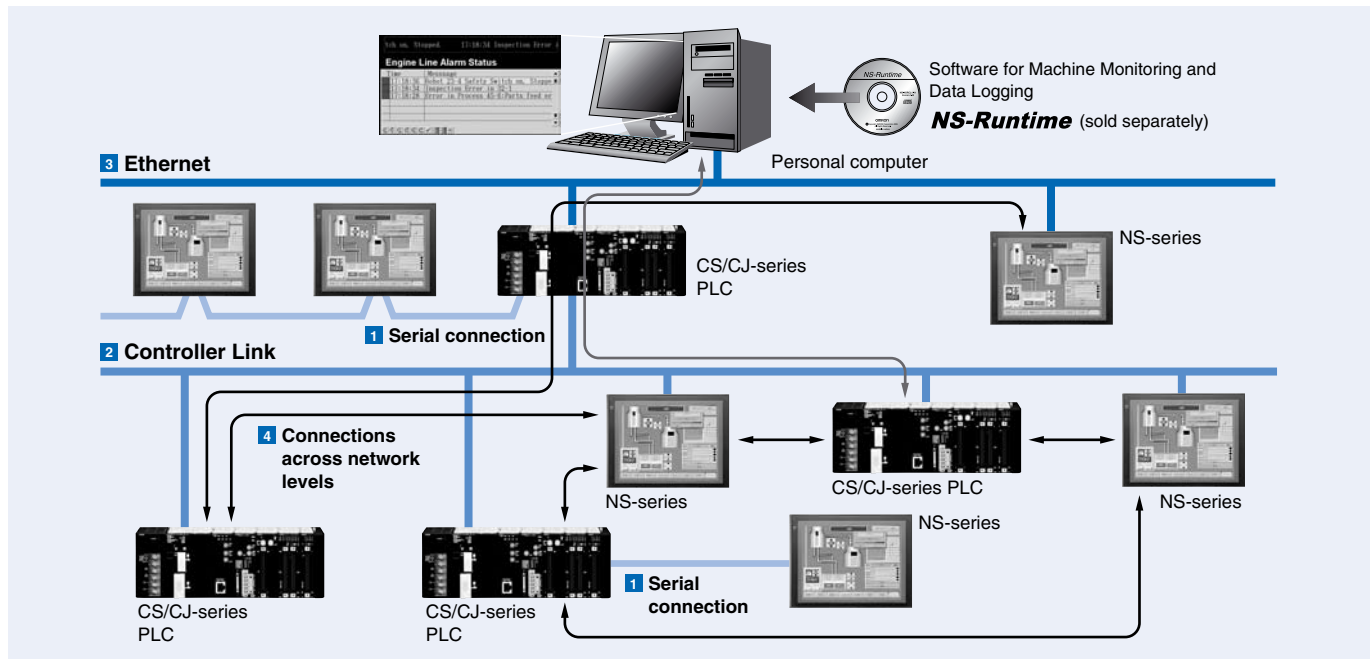

1 Serial connection

1:1 NT Link or Host Link

NS:PLC = 1:1

Connecting with the PLC through port A or port B




NS:PLC = 1:2



1:N NT Link


NS:PLC ratio = 8:1 max.

Up to 8 NS-series can be connected to each of the PLC's RS-232C/RS-422A ports.

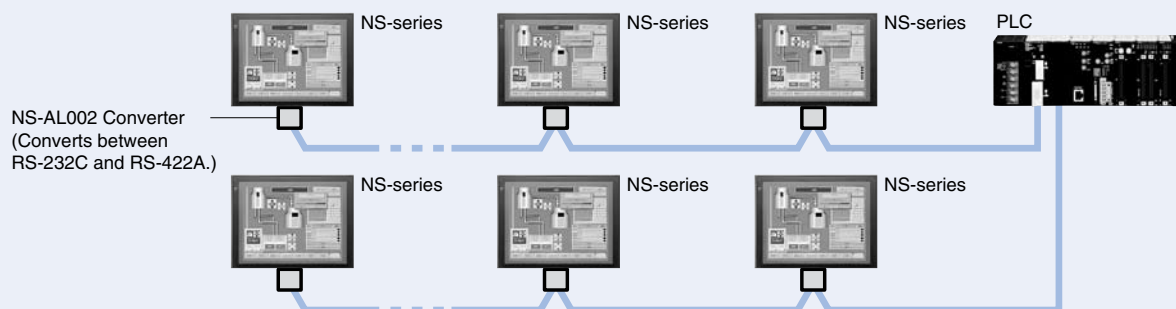


2 Controller Link Connection

The HMI can be connected to an OMRON Controller Link network by mounting a Controller Link Interface Unit.

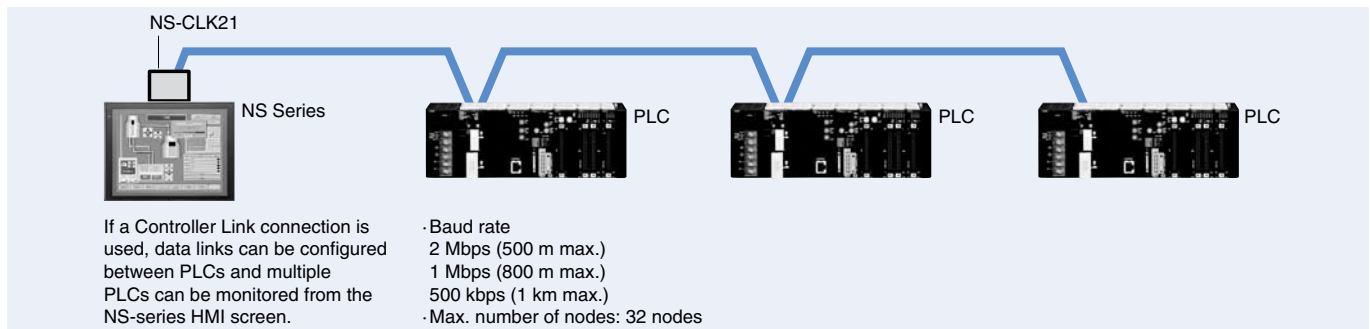


3 Ethernet Connection

When using the NS-series HMI with Ethernet you can connect to any Omron controller with an Ethernet port. Beside this you can also use a FTP client to gather data from the NS and even transfer project data to different NS HMI terminals.

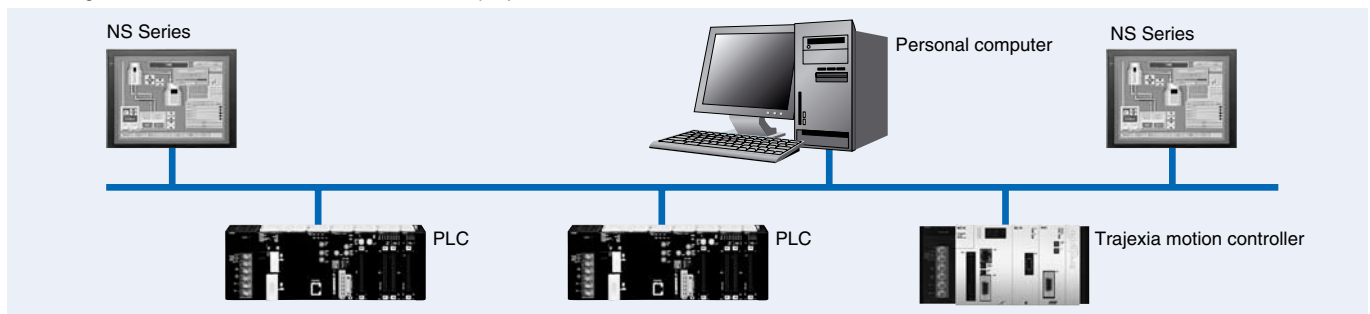

4 Connections across Different Network Levels

The NS-series HMI can connect to a variety of devices in the network, through as many as 3 network levels. For example, if SAP (Smart Active Parts) are being used, an NS-series HMI connected by Ethernet can be used to monitor the information in a PLC connected through Controller Link as well as the information in the DeviceNet Slaves connected to that PLC.

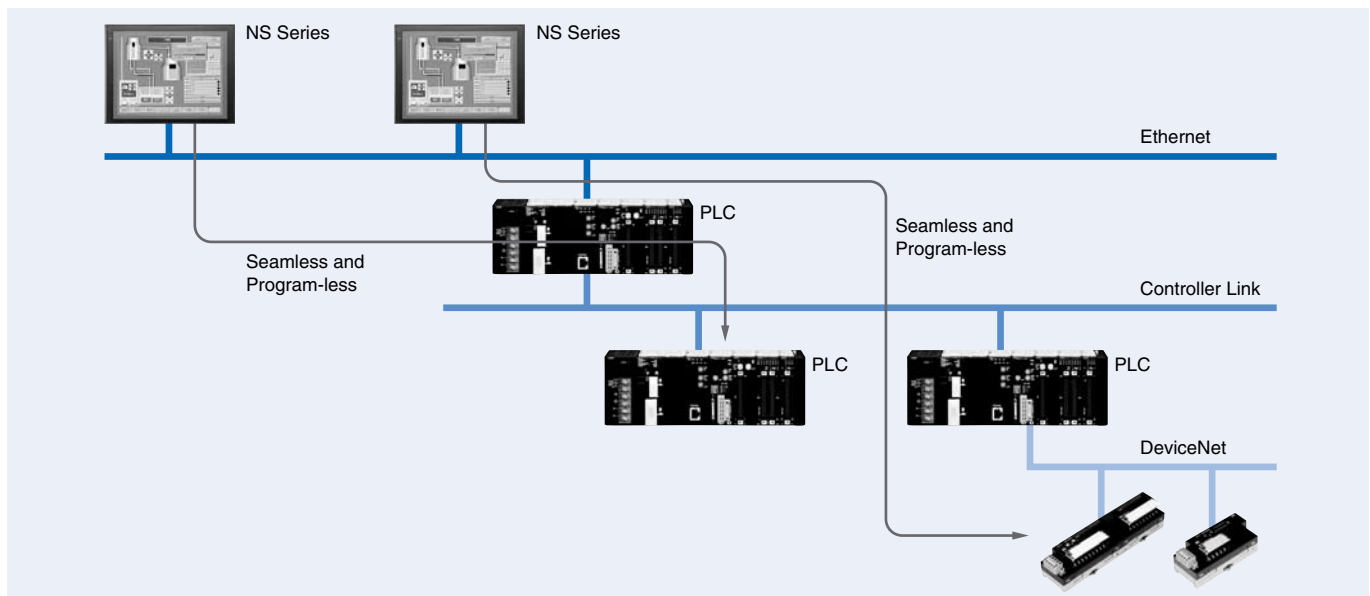


User-Friendly Software

Integrated Simulation

Simulate the HMI program with the PLC program on your PC.

The integrated simulation function allows you to test the ladder program with the HMI program in an interactive way. You can quickly make changes and test the function to see if it works as desired. Therefore the integrated simulation function significantly increases debugging efficiency.

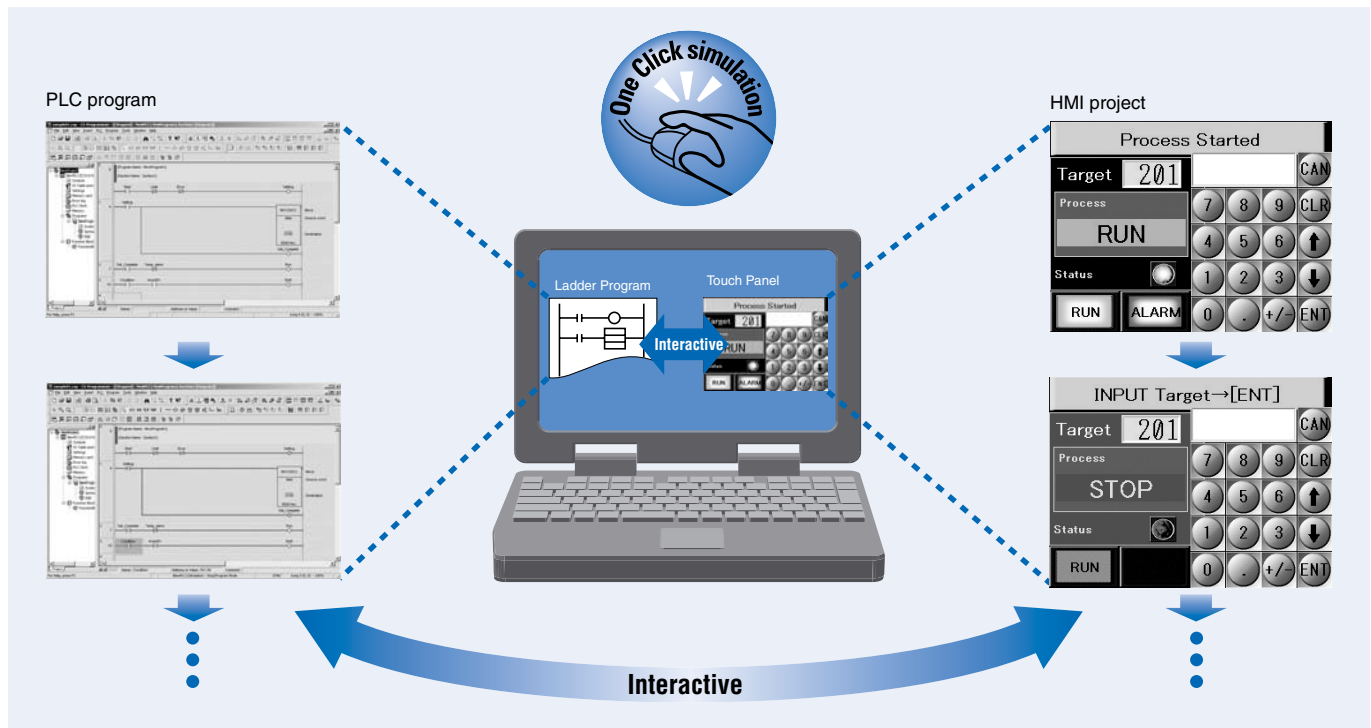

Programming with Symbols

Screens can be created even when addresses are unknown.

Screens can be created even if the addresses have not been determined. Addresses can be input as either names or actual addresses and the addresses can be input from the symbol table after the addresses are determined.

The symbol table created in our PLC programming package, CX-Programmer can be shared with CX-Designer by simply dragging and dropping them in the software.

Symbol Table

Host	Name	Type	Address	Type/Number	I/O Comment
SERIALA	AutoGen01	BOOL	WR00000.00		EMERGENCY STOP
SERIALA	AutoGen02	BOOL	WR00000.01		UPPER LIMIT
SERIALA	AutoGen03	BOOL	WR00000.04		DOWN SWITCH
SERIALA	AutoGen04	BOOL	WR00000.01		MANUAL SWITCH
SERIALA	AutoGen05	BOOL	WR00000.00		AUTO SWITCH
SERIALA	AutoGen06	CHANNEL	00004		FLOOR 5
SERIALA	AutoGen07	CHANNEL	00000		FLOOR 4
SERIALA	AutoGen08	CHANNEL	00000		FLOOR 3
SERIALA	AutoGen09	CHANNEL	00000		FLOOR 2
SERIALA	AutoGen10	CHANNEL	00000		FLOOR 1
SERIALA	AutoGen11	CHANNEL	00000		FLOOR 0
SERIALA	AutoGen12	CHANNEL	00000		FLOOR -1
SERIALA	AutoGen13	CHANNEL	00000		FLOOR -2
SERIALA	AutoGen14	CHANNEL	00000		FLOOR -3
SERIALA	AutoGen15	CHANNEL	00000		FLOOR -4
SERIALA	AutoGen16	CHANNEL	00000		FLOOR -5
SERIALA	AutoGen17	CHANNEL	00000		FLOOR -6
SERIALA	AutoGen18	CHANNEL	00000		FLOOR -7
SERIALA	AutoGen19	CHANNEL	00000		FLOOR -8
SERIALA	AutoGen20	CHANNEL	00000		FLOOR -9
SERIALA	AutoGen21	CHANNEL	00000		FLOOR -10
SERIALA	AutoGen22	CHANNEL	00000		FLOOR -11
SERIALA	AutoGen23	CHANNEL	00000		FLOOR -12
SERIALA	AutoGen24	CHANNEL	00000		FLOOR -13
SERIALA	AutoGen25	CHANNEL	00000		FLOOR -14
SERIALA	AutoGen26	CHANNEL	00000		FLOOR -15
SERIALA	AutoGen27	CHANNEL	00000		FLOOR -16
SERIALA	AutoGen28	CHANNEL	00000		FLOOR -17
SERIALA	AutoGen29	CHANNEL	00000		FLOOR -18
SERIALA	AutoGen30	CHANNEL	00000		FLOOR -19
SERIALA	AutoGen31	CHANNEL	00000		FLOOR -20
SERIALA	AutoGen32	CHANNEL	00000		FLOOR -21
SERIALA	AutoGen33	CHANNEL	00000		FLOOR -22
SERIALA	AutoGen34	CHANNEL	00000		FLOOR -23
SERIALA	AutoGen35	CHANNEL	00000		FLOOR -24
SERIALA	AutoGen36	CHANNEL	00000		FLOOR -25
SERIALA	AutoGen37	CHANNEL	00000		FLOOR -26
SERIALA	AutoGen38	CHANNEL	00000		FLOOR -27
SERIALA	AutoGen39	CHANNEL	00000		FLOOR -28
SERIALA	AutoGen40	CHANNEL	00000		FLOOR -29
SERIALA	AutoGen41	CHANNEL	00000		FLOOR -30
SERIALA	AutoGen42	CHANNEL	00000		FLOOR -31
SERIALA	AutoGen43	CHANNEL	00000		FLOOR -32
SERIALA	AutoGen44	CHANNEL	00000		FLOOR -33
SERIALA	AutoGen45	CHANNEL	00000		FLOOR -34
SERIALA	AutoGen46	CHANNEL	00000		FLOOR -35
SERIALA	AutoGen47	CHANNEL	00000		FLOOR -36
SERIALA	AutoGen48	CHANNEL	00000		FLOOR -37
SERIALA	AutoGen49	CHANNEL	00000		FLOOR -38
SERIALA	AutoGen50	CHANNEL	00000		FLOOR -39
SERIALA	AutoGen51	CHANNEL	00000		FLOOR -40
SERIALA	AutoGen52	CHANNEL	00000		FLOOR -41
SERIALA	AutoGen53	CHANNEL	00000		FLOOR -42
SERIALA	AutoGen54	CHANNEL	00000		FLOOR -43
SERIALA	AutoGen55	CHANNEL	00000		FLOOR -44
SERIALA	AutoGen56	CHANNEL	00000		FLOOR -45
SERIALA	AutoGen57	CHANNEL	00000		FLOOR -46
SERIALA	AutoGen58	CHANNEL	00000		FLOOR -47
SERIALA	AutoGen59	CHANNEL	00000		FLOOR -48
SERIALA	AutoGen60	CHANNEL	00000		FLOOR -49
SERIALA	AutoGen61	CHANNEL	00000		FLOOR -50
SERIALA	AutoGen62	CHANNEL	00000		FLOOR -51
SERIALA	AutoGen63	CHANNEL	00000		FLOOR -52
SERIALA	AutoGen64	CHANNEL	00000		FLOOR -53
SERIALA	AutoGen65	CHANNEL	00000		FLOOR -54
SERIALA	AutoGen66	CHANNEL	00000		FLOOR -55
SERIALA	AutoGen67	CHANNEL	00000		FLOOR -56
SERIALA	AutoGen68	CHANNEL	00000		FLOOR -57
SERIALA	AutoGen69	CHANNEL	00000		FLOOR -58
SERIALA	AutoGen70	CHANNEL	00000		FLOOR -59
SERIALA	AutoGen71	CHANNEL	00000		FLOOR -60
SERIALA	AutoGen72	CHANNEL	00000		FLOOR -61
SERIALA	AutoGen73	CHANNEL	00000		FLOOR -62
SERIALA	AutoGen74	CHANNEL	00000		FLOOR -63
SERIALA	AutoGen75	CHANNEL	00000		FLOOR -64
SERIALA	AutoGen76	CHANNEL	00000		FLOOR -65
SERIALA	AutoGen77	CHANNEL	00000		FLOOR -66
SERIALA	AutoGen78	CHANNEL	00000		FLOOR -67
SERIALA	AutoGen79	CHANNEL	00000		FLOOR -68
SERIALA	AutoGen80	CHANNEL	00000		FLOOR -69
SERIALA	AutoGen81	CHANNEL	00000		FLOOR -70
SERIALA	AutoGen82	CHANNEL	00000		FLOOR -71
SERIALA	AutoGen83	CHANNEL	00000		FLOOR -72
SERIALA	AutoGen84	CHANNEL	00000		FLOOR -73
SERIALA	AutoGen85	CHANNEL	00000		FLOOR -74
SERIALA	AutoGen86	CHANNEL	00000		FLOOR -75
SERIALA	AutoGen87	CHANNEL	00000		FLOOR -76
SERIALA	AutoGen88	CHANNEL	00000		FLOOR -77
SERIALA	AutoGen89	CHANNEL	00000		FLOOR -78
SERIALA	AutoGen90	CHANNEL	00000		FLOOR -79
SERIALA	AutoGen91	CHANNEL	00000		FLOOR -80
SERIALA	AutoGen92	CHANNEL	00000		FLOOR -81
SERIALA	AutoGen93	CHANNEL	00000		FLOOR -82
SERIALA	AutoGen94	CHANNEL	00000		FLOOR -83
SERIALA	AutoGen95	CHANNEL	00000		FLOOR -84
SERIALA	AutoGen96	CHANNEL	00000		FLOOR -85
SERIALA	AutoGen97	CHANNEL	00000		FLOOR -86
SERIALA	AutoGen98	CHANNEL	00000		FLOOR -87
SERIALA	AutoGen99	CHANNEL	00000		FLOOR -88
SERIALA	AutoGen100	CHANNEL	00000		FLOOR -89
SERIALA	AutoGen101	CHANNEL	00000		FLOOR -90
SERIALA	AutoGen102	CHANNEL	00000		FLOOR -91
SERIALA	AutoGen103	CHANNEL	00000		FLOOR -92
SERIALA	AutoGen104	CHANNEL	00000		FLOOR -93
SERIALA	AutoGen105	CHANNEL	00000		FLOOR -94
SERIALA	AutoGen106	CHANNEL	00000		FLOOR -95
SERIALA	AutoGen107	CHANNEL	00000		FLOOR -96
SERIALA	AutoGen108	CHANNEL	00000		FLOOR -97
SERIALA	AutoGen109	CHANNEL	00000		FLOOR -98
SERIALA	AutoGen110	CHANNEL	00000		FLOOR -99
SERIALA	AutoGen111	CHANNEL	00000		FLOOR -100
SERIALA	AutoGen112	CHANNEL	00000		FLOOR -101
SERIALA	AutoGen113	CHANNEL	00000		FLOOR -102
SERIALA	AutoGen114	CHANNEL	00000		FLOOR -103
SERIALA	AutoGen115	CHANNEL	00000		FLOOR -104
SERIALA	AutoGen116	CHANNEL	00000		FLOOR -105
SERIALA	AutoGen117	CHANNEL	00000		FLOOR -106
SERIALA	AutoGen118	CHANNEL	00000		FLOOR -107
SERIALA	AutoGen119	CHANNEL	00000		FLOOR -108
SERIALA	AutoGen120	CHANNEL	00000		FLOOR -109
SERIALA	AutoGen121	CHANNEL	00000		FLOOR -110
SERIALA	AutoGen122	CHANNEL	00000		FLOOR -111
SERIALA	AutoGen123	CHANNEL	00000		FLOOR -112
SERIALA	AutoGen124	CHANNEL	00000		FLOOR -113
SERIALA	AutoGen125	CHANNEL	00000		FLOOR -114
SERIALA	AutoGen126	CHANNEL	00000		FLOOR -115
SERIALA	AutoGen127	CHANNEL	00000		FLOOR -116
SERIALA	AutoGen128	CHANNEL	00000		FLOOR -117
SERIALA	AutoGen129	CHANNEL	00000		FLOOR -118
SERIALA	AutoGen130	CHANNEL	00000		FLOOR -119
SERIALA	AutoGen131	CHANNEL	00000		FLOOR -120
SERIALA	AutoGen132	CHANNEL	00000		FLOOR -121
SERIALA	AutoGen133	CHANNEL	00000		FLOOR -122
SERIALA	AutoGen134	CHANNEL	00000		FLOOR -123
SERIALA	AutoGen135	CHANNEL	00000		FLOOR -124
SERIALA	AutoGen136	CHANNEL	00000		FLOOR -125
SERIALA	AutoGen137	CHANNEL	00000		FLOOR -126
SERIALA	AutoGen138	CHANNEL	00000		FLOOR -127
SERIALA	AutoGen139	CHANNEL	00000		FLOOR -128
SERIALA	AutoGen140	CHANNEL	00000		FLOOR -129
SERIALA	AutoGen141	CHANNEL	00000		FLOOR -130
SERIALA	AutoGen142	CHANNEL	00000		FLOOR -131
SERIALA	AutoGen143	CHANNEL	00000		FLOOR -132
SERIALA	AutoGen144	CHANNEL	00000		FLOOR -133
SERIALA	AutoGen145	CHANNEL	00000		FLOOR -134
SERIALA	AutoGen146	CHANNEL	00000		FLOOR -135
SERIALA	AutoGen147	CHANNEL	00000		FLOOR -136
SERIALA	AutoGen148	CHANNEL	00000		FLOOR -137
SERIALA	AutoGen149	CHANNEL	00000		FLOOR -138
SERIALA	AutoGen150	CHANNEL	00000		FLOOR -139
SERIALA	AutoGen151	CHANNEL	00000		FLOOR -140
SERIALA	AutoGen152	CHANNEL	00000		FLOOR -141
SERIALA	AutoGen153	CHANNEL	00000		FLOOR -142
SERIALA	AutoGen154	CHANNEL	00000		FLOOR -143
SERIALA	AutoGen155	CHANNEL	00000		FLOOR -144
SERIALA	AutoGen156	CHANNEL	00000		FLOOR -145
SERIALA	AutoGen157	CHANNEL	00000		FLOOR -146
SERIALA	AutoGen158	CHANNEL	00000		FLOOR -147
SERIALA	AutoGen159	CHANNEL	00000		FLOOR -148
SERIALA	AutoGen160	CHANNEL	00000		FLOOR -149
SERIALA	AutoGen161	CHANNEL	00000		FLOOR -150
SERIALA	AutoGen162	CHANNEL	00000		FLOOR -151
SERIALA	AutoGen163	CHANNEL	00000		FLOOR -152
SERIALA	AutoGen164	CHANNEL	00000		FLOOR -153
SERIALA	AutoGen165	CHANNEL	00000		FLOOR -154
SERIALA	AutoGen166	CHANNEL	00000		FLOOR -155
SERIALA	AutoGen167	CHANNEL	00000		FLOOR -156
SERIALA	AutoGen168	CHANNEL	00000		FLOOR -157
SERIALA	AutoGen169	CHANNEL	00000		FLOOR -158
SERIALA	AutoGen170	CHANNEL	00000		FLOOR -159
SERIALA	AutoGen171	CHANNEL	00000		FLOOR -160
SERIALA	AutoGen172	CHANNEL	00000		FLOOR -161
SERIALA	AutoGen173	CHANNEL	00000		FLOOR -162
SERIALA	AutoGen174	CHANNEL	00000		FLOOR -163
SERIALA	AutoGen175	CHANNEL	00000		FLOOR -164
SERIALA	AutoGen176	CHANNEL	00000		FLOOR -165
SERIALA	AutoGen177	CHANNEL	00000		FLOOR -166
SERIALA	AutoGen178	CHANNEL	00000		FLOOR -167
SERIALA	AutoGen179	CHANNEL	00000		FLOOR -168
SERIALA	AutoGen180	CHANNEL	00000		FLOOR -169
SERIALA	AutoGen181	CHANNEL	00000		FLOOR -170
SERIALA	AutoGen182	CHANNEL	00000		FLOOR -171
SERIALA	AutoGen183	CHANNEL	00000		FLOOR -172
SERIALA	AutoGen184	CHANNEL	00000		FLOOR -173
SERIALA	AutoGen185	CHANNEL	00000		FLOOR -174
SERIALA	AutoGen186	CHANNEL	00000		FLOOR -175
SERIALA	AutoGen187	CHANNEL	00000		FLOOR -176
SERIALA	AutoGen188	CHANNEL	00000		FLOOR -177
SERIALA	AutoGen189	CHANNEL	00000		FLOOR -178
SERIALA	AutoGen190	CHANNEL	00000		FLOOR -179
SERIALA	AutoGen191	CHANNEL	00000		FLOOR -180
SERIALA	AutoGen192	CHANNEL	00000		FLOOR -181
SERIALA	AutoGen193	CHANNEL	00000		FLOOR -182
SERIALA	AutoGen194	CHANNEL	00000		FLOOR -183
SERIALA	AutoGen195	CHANNEL	00000		FLOOR -184
SERIALA	AutoGen196	CHANNEL	00000		FLOOR -185
SERIALA	AutoGen197	CHANNEL	00000		FLOOR -186
SERIALA	AutoGen198	CHANNEL	00000		FLOOR -187
SERIALA	AutoGen199	CHANNEL	00000		FLOOR -188
SERIALA	AutoGen200	CHANNEL	00000		FLOOR -189
SERIALA	AutoGen201	CHANNEL	00000		FLOOR -190
SERIALA	AutoGen202	CHANNEL	00000		FLOOR -191
SERIALA	AutoGen203	CHANNEL	00000		FLOOR -192
SERIALA	AutoGen204	CHANNEL	00000		FLOOR -193
SERIALA	AutoGen205	CHANNEL	00000		FLOOR -194
SERIALA	AutoGen206	CHANNEL	00000		FLOOR -195
SERIALA	AutoGen207	CHANNEL	00000		FLOOR -196
SERIALA	AutoGen208	CHANNEL	00000		FLOOR -197
SERIALA	AutoGen209	CHANNEL	00000		FLOOR -198
SERIALA	AutoGen210	CHANNEL	00000		FLOOR -199
SERIALA	AutoGen211	CHANNEL	00000		FLOOR -200
SERIALA	AutoGen212	CHANNEL	00000		FLOOR -201
SERIALA	AutoGen213	CHANNEL	00000		FLOOR -202
SERIALA	AutoGen214	CHANNEL	00000		FLOOR -203
SERIALA	AutoGen215	CHANNEL	00000		FLOOR -204
SERIALA	AutoGen216	CHANNEL	00000		FLOOR -205
SERIALA	AutoGen217	CHANNEL	00000		FLOOR -206
SERIALA	AutoGen218	CHANNEL	00000		FLOOR -207
SERIALA	AutoGen219	CHANNEL	00000		FLOOR -208
SERIALA	AutoGen220	CHANNEL	00000		FLOOR -209
SERIALA	AutoGen221	CHANNEL	00000		FLOOR -210
SERIALA	AutoGen222	CHANNEL	00000		FLOOR -211
SERIALA	AutoGen223				

Multi-language Support

Easily export/import text to translate in many different international languages.

As the NS-series HMI support Unicode you can use many different languages from Asia and Europe. In runtime you can switch between 16 languages.

With CX-Designer it is very easy to export and import texts for translation as it is using CSV format. When you import a new language you can even choose to apply the same label properties (e.g. font, colour, etc.) as an existing language.

NS Series

Multi-language CSV data

Label	Chinese	Japanese	German	English	
80: Setting Screen	設定画面	設定画面	Einstellung Des Schirms	Setting Screen	
81: Monitor Value	監視値表示	モニタ値表示	Überwachung Des Wertes	Monitor Value	
82: TARGET	目標値	目標値	ZIEL	TARGET	
83: ALARM MAX	警報上限値	警報上限値	WARNUNG MAXIMUM	ALARM MAX	
84: ALARM MIN	警報下限値	警報下限値	WARNUNG MINIMUM	ALARM MIN	
85: OPERATION QUANTITY	操作数量	조작수량	BETRIEB QUANTITÄT	OPERATION QUANTITY	
86: MANUAL OPERATION	手動操作画面	수동조작 화면	MANUELTREIB	MANUAL OPERATION	
87: OPERATION MAX	操作数量上限値	조작수량상한치	BETRIEB MAXIMUM	OPERATION MAX	
88: OPERATION MIN	操作数量下限値	조작수량하한치	BETRIEB MINIMUM	OPERATION MIN	
89: Pulse	90: Pulse	パルス	펄스	Impuls	Pulse
91: Pulse	パルス	펄스	Impuls	Pulse	
92: Pulse	パルス	펄스	Impuls	Pulse	
93: Pulse	パルス	펄스	Impuls	Pulse	
94: Pulse	パルス	펄스	Impuls	Pulse	
95: RUN/STOP	運転/停止	가동/정지	LAUF/STOP	RUN/STOP	
96: AUTO/MANUAL	自動/手動	자동/수동	AUTOMATISCH/MANUELL	AUTO/MANUAL	
97: INITIALIZE	リセット画面	초기화 화면	INITIALISIEREN	INITIALIZE	

Import

Convenient!

Advanced functions

Remote machine servicing over the WWW

The NS HMI series have a web-interface built into the HMI terminal. The web-interface function allows you to see the local NS HMI screen, which is also seen by the operator, remotely in any standard web browser without the need to install software on your PC. This makes it very easy to see what is happening at the site where the machine is located. You can see the alarms and actual values and even operate the HMI from your remote location.

The web-interface¹⁾ can run in a monitor mode, which allows you to only monitor certain screens, or it can run in the operation mode so that you can operate the HMI terminal as if you were located at the machine.

You can also show all the files stored on the local CF card, e.g. log files created by the NS data logger, and open or download these files from your remote location.



¹⁾ Web-interface function will be delivered with CX-One v3.1

NS-Runtime

Machine monitoring and reporting at the production site

Machine Viewer

The NS-Runtime software provides functions equivalent to the NS Series, and enables you to display information and perform operations for a complete production line. NS-Runtime will run the NS project, created with CX-Designer, on Windows XP including the DyaloX Series. Beside the existing NS functionality, the NS-Runtime also provides some additional functions explained in more detail below.

Data Logger

Data can be logged through background processing, with up to 160,000 points stored in one file. The logged data is stored in CSV format, and data can be displayed on data log graphs.

Example: 160,000 Points

Data can be logged for approximately 7.4 days, assuming data is logged every two seconds for 12 hours a day. By using automatic file saving, data logging can be continued even longer than 7.4 days.

Display documents

The display document function in NS-Runtime makes it possible to show documents (e.g. PDF file) in the screen itself. This is useful for maintenance instructions or reporting. You can even show a different document every time an alarm occurs.




Application Startup Function

You can start any user application from NS-Runtime by simply clicking a button. This allows you to open documents like Excel or any other software tool you need to use.

Wide Screen


Computer output can be displayed on another wide-screen monitor.

XGA (1,024 x 768 dots) and up to a maximum screen size of 3,840 x 2,400 is supported. Alarms occurring in devices or the line can be monitored.

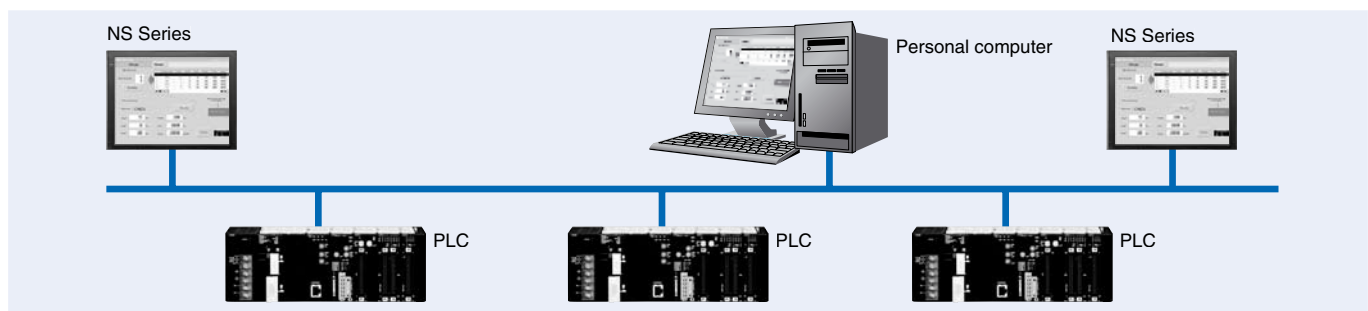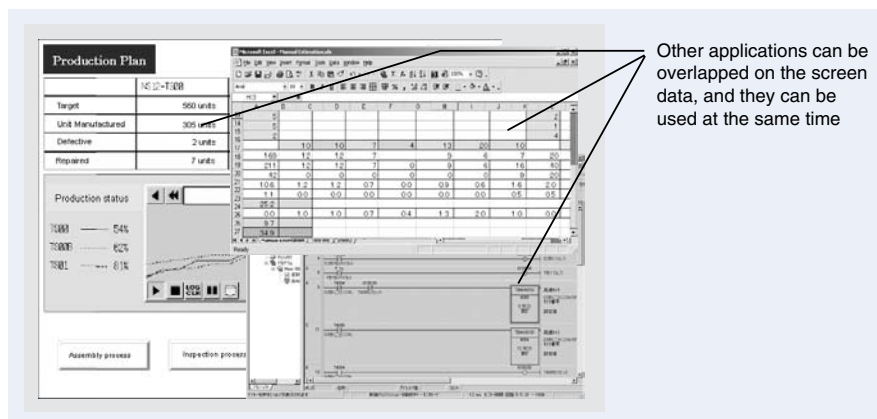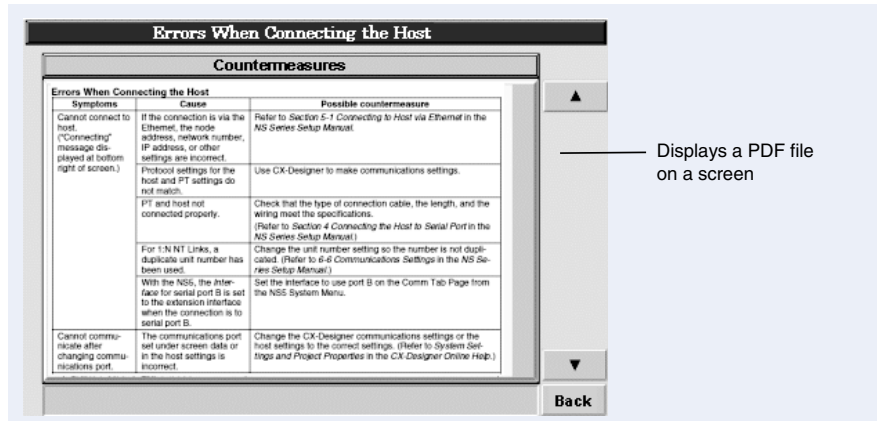

NSH5 Series

The NSH5 is the mobile version of the NS5 HMI. So it comes with the same strong HMI functions, but allows you to move around the machine with the HMI in your hand. For this we provide the NSH5 with an extremely tough casing that can withstand severe shock and is also completely water resistant.

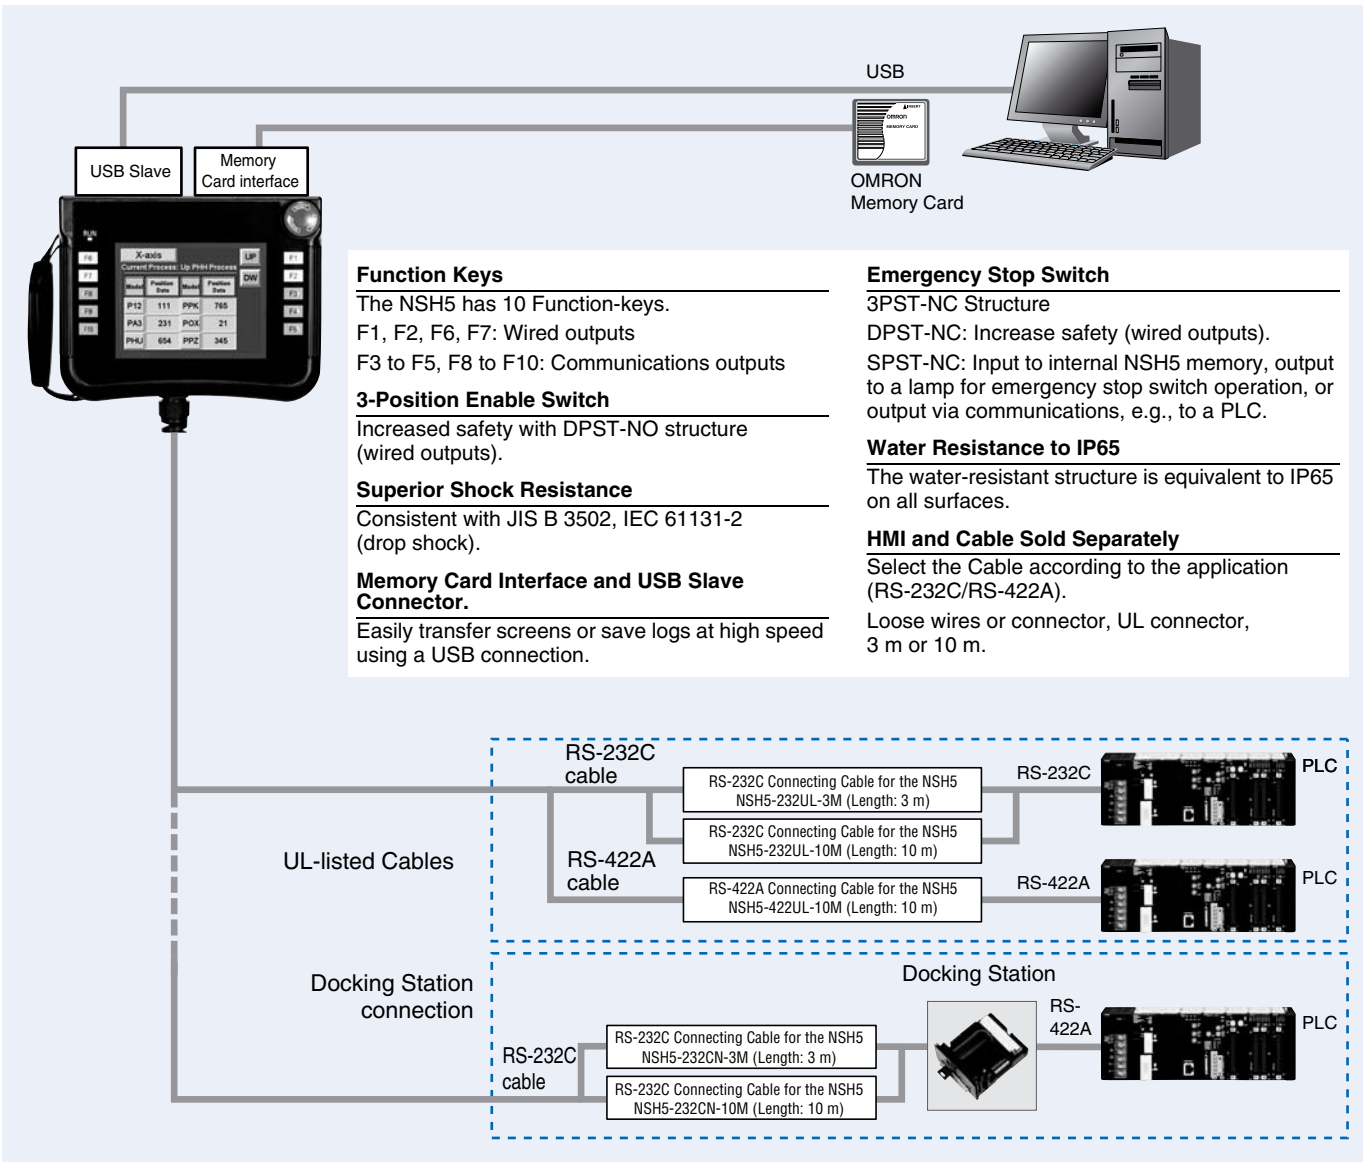

Options

Docking Station

The Docking Station is designed in a way that the emergency stop switch line will not turn OFF to trigger the emergency stop circuit even if the NSH5 is disconnected from the station. This eliminates the need for adding an external circuit. Power is disconnected via a key. You can connect a maximum of 15 Docking Stations to a PLC.

Visor

Installing a visor helps to protect the Emergency Stop Switch and prevents improper operation from occurring inadvertently when the HMI is laid down.




Sysmac One Series

Integrated Machine Management: Sysmac One series

The Sysmac One series combine an NS touch screen with a powerful CJ1 PLC and the choice of different network interfaces in a compact housing occupying less panel space. With the standard USB port you can program both the controller part and the graphical display. The Sysmac One series are available in different screen sizes and two different controller types. The controller is running on a separate CPU so that you have the best performance on both screen and controller. Another benefit of this is that the controller can continue operating even if the screen is accidentally broken.

		Display Section					
		5.7 Inches		8.4 Inches	10.4 Inches	12.1 Inches	Main Differences in Specifications
		Colour STN	Colour TFT				
Controller Section (Designated by model number suffix)	M3x	■	■	■	-	-	• I/O capacity: 640 • User memory: 20 Ksteps • Expanded data memory: None
	G5x	■	■	■	■	■	• I/O capacity: 1,280 • User memory: 60 Ksteps • Expanded data memory: 32 Kwords x 3 banks


Sysmac One Appearance

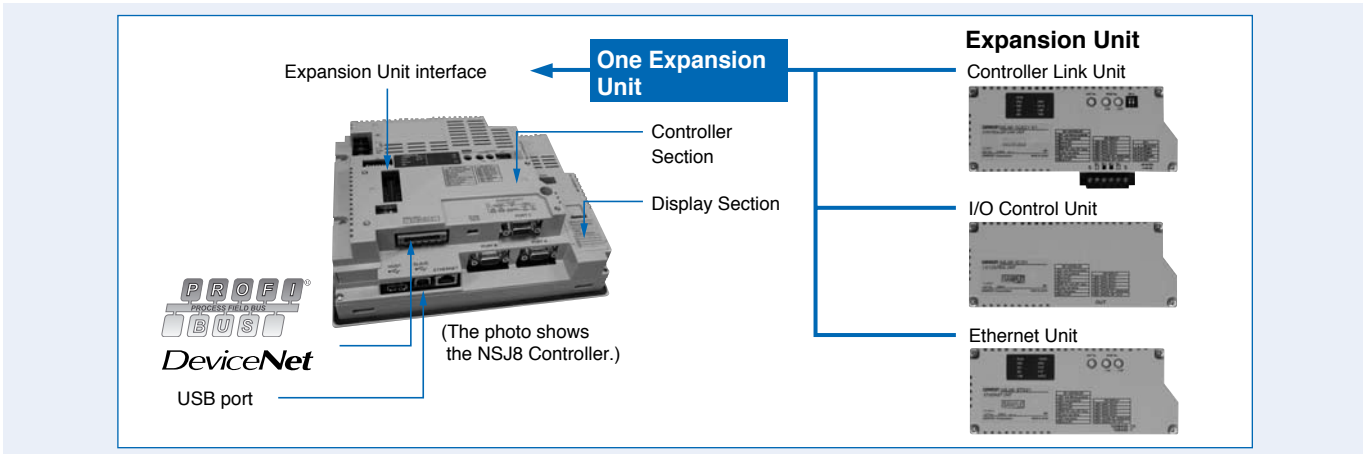

Easy Maintenance using Troubleshooter function

Quickly see Errors and Statuses of Controller and Network device

The standard-equipped Troubleshooter contributes to solving problems during device startup and operation. When an error occurs, simply follow the on-screen instructions to confirm the error details and quickly implement counter measures, without referring to the manual.

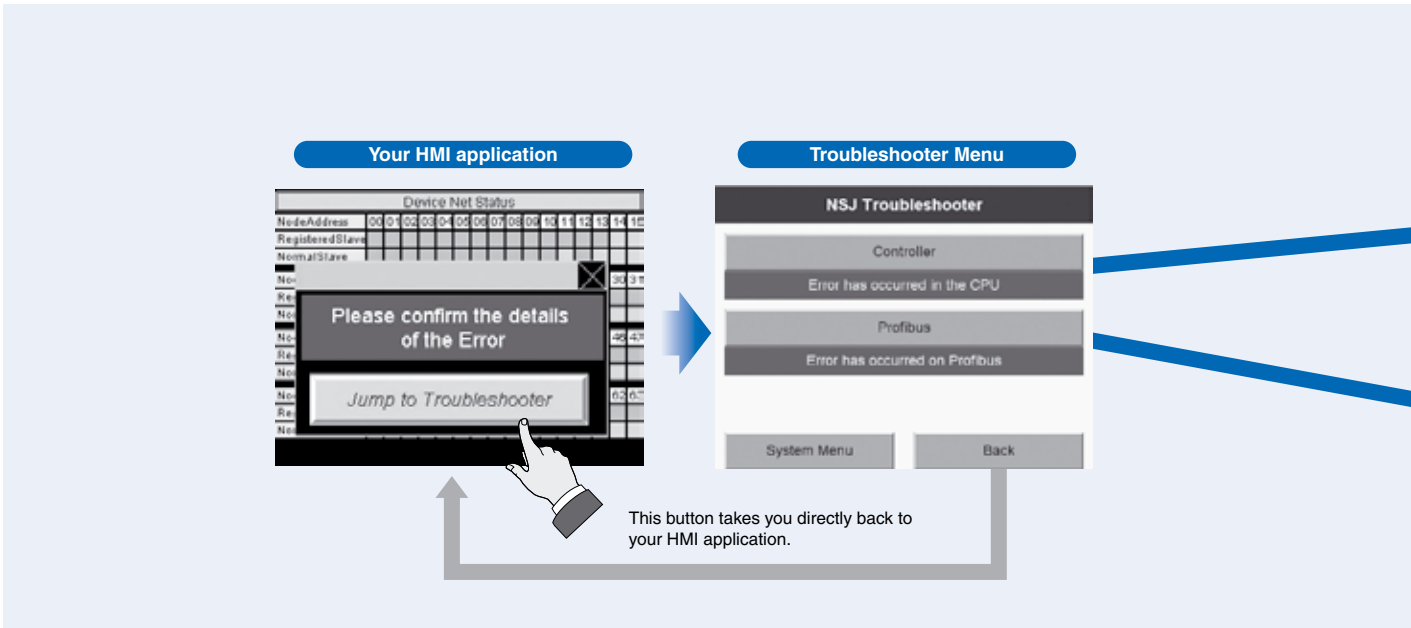

Expansion Units

For the Sysmac One series we have three different expansion units available. It is only possible to use one expansion unit on a single Sysmac One model. Two expansion units are providing extra network possibilities on Controller Link and Ethernet. The third expansion unit allows you to connect the standard CJ1 units to the Sysmac One model.

Controller Link Unit (NSJW-CLK21-V1)


High-speed, large-capacity data link

The PLC data link function can be used to provide a high-speed, large-capacity data link between Controllers over the Controller Link network.

I/O Control Unit (NSJW-IC101)

Easily connect Special I/O Units and CPU Bus Units

Used to mount Motion Control Units and other Special I/O Units or CPU Bus Units to the NSJ-series Controller, for excellent expandability.


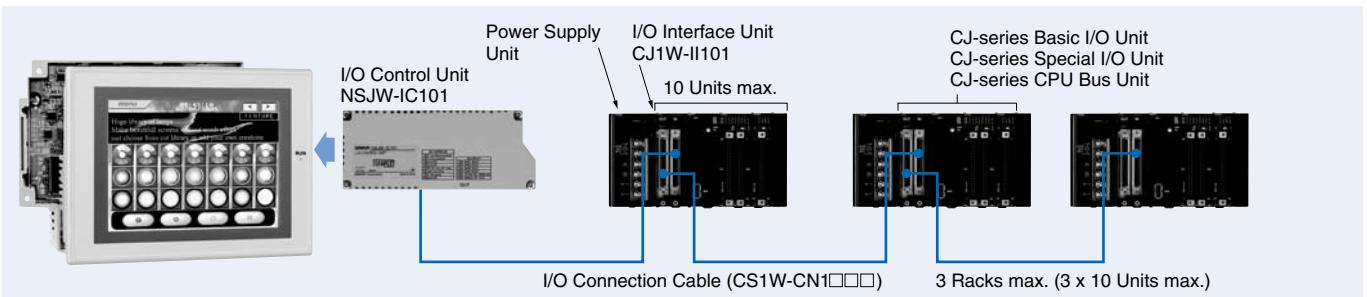


Note: Used to mount Motion Control Units and other Special I/O Units or CPU Bus Units to the NSJ-series Controller, for excellent expandability.

Ethernet Unit (NSJW-ETN21)


Full use of versatile Ethernet functions

The Ethernet expansion unit provides extra Ethernet functions like sending/receiving messages, using CMND instruction and sending/receiving E-mails.

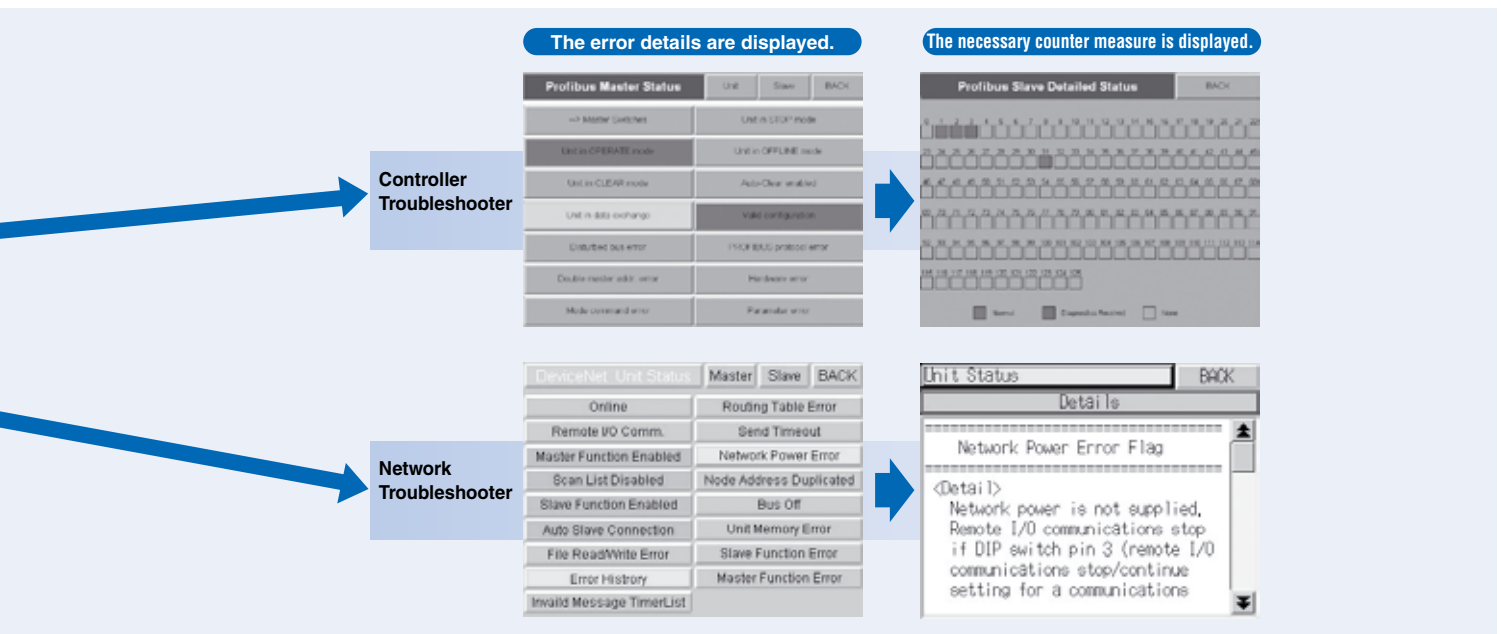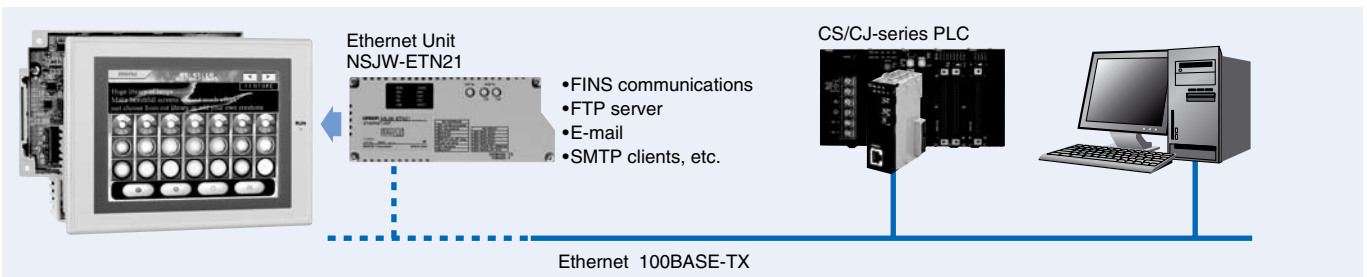


Control Panel Standardization

By standardizing control panels based on SYSMAC One, design steps can be reduced and software assets can be reused to eliminate redundancy and inconsistency all the way from the design stage to system startup.

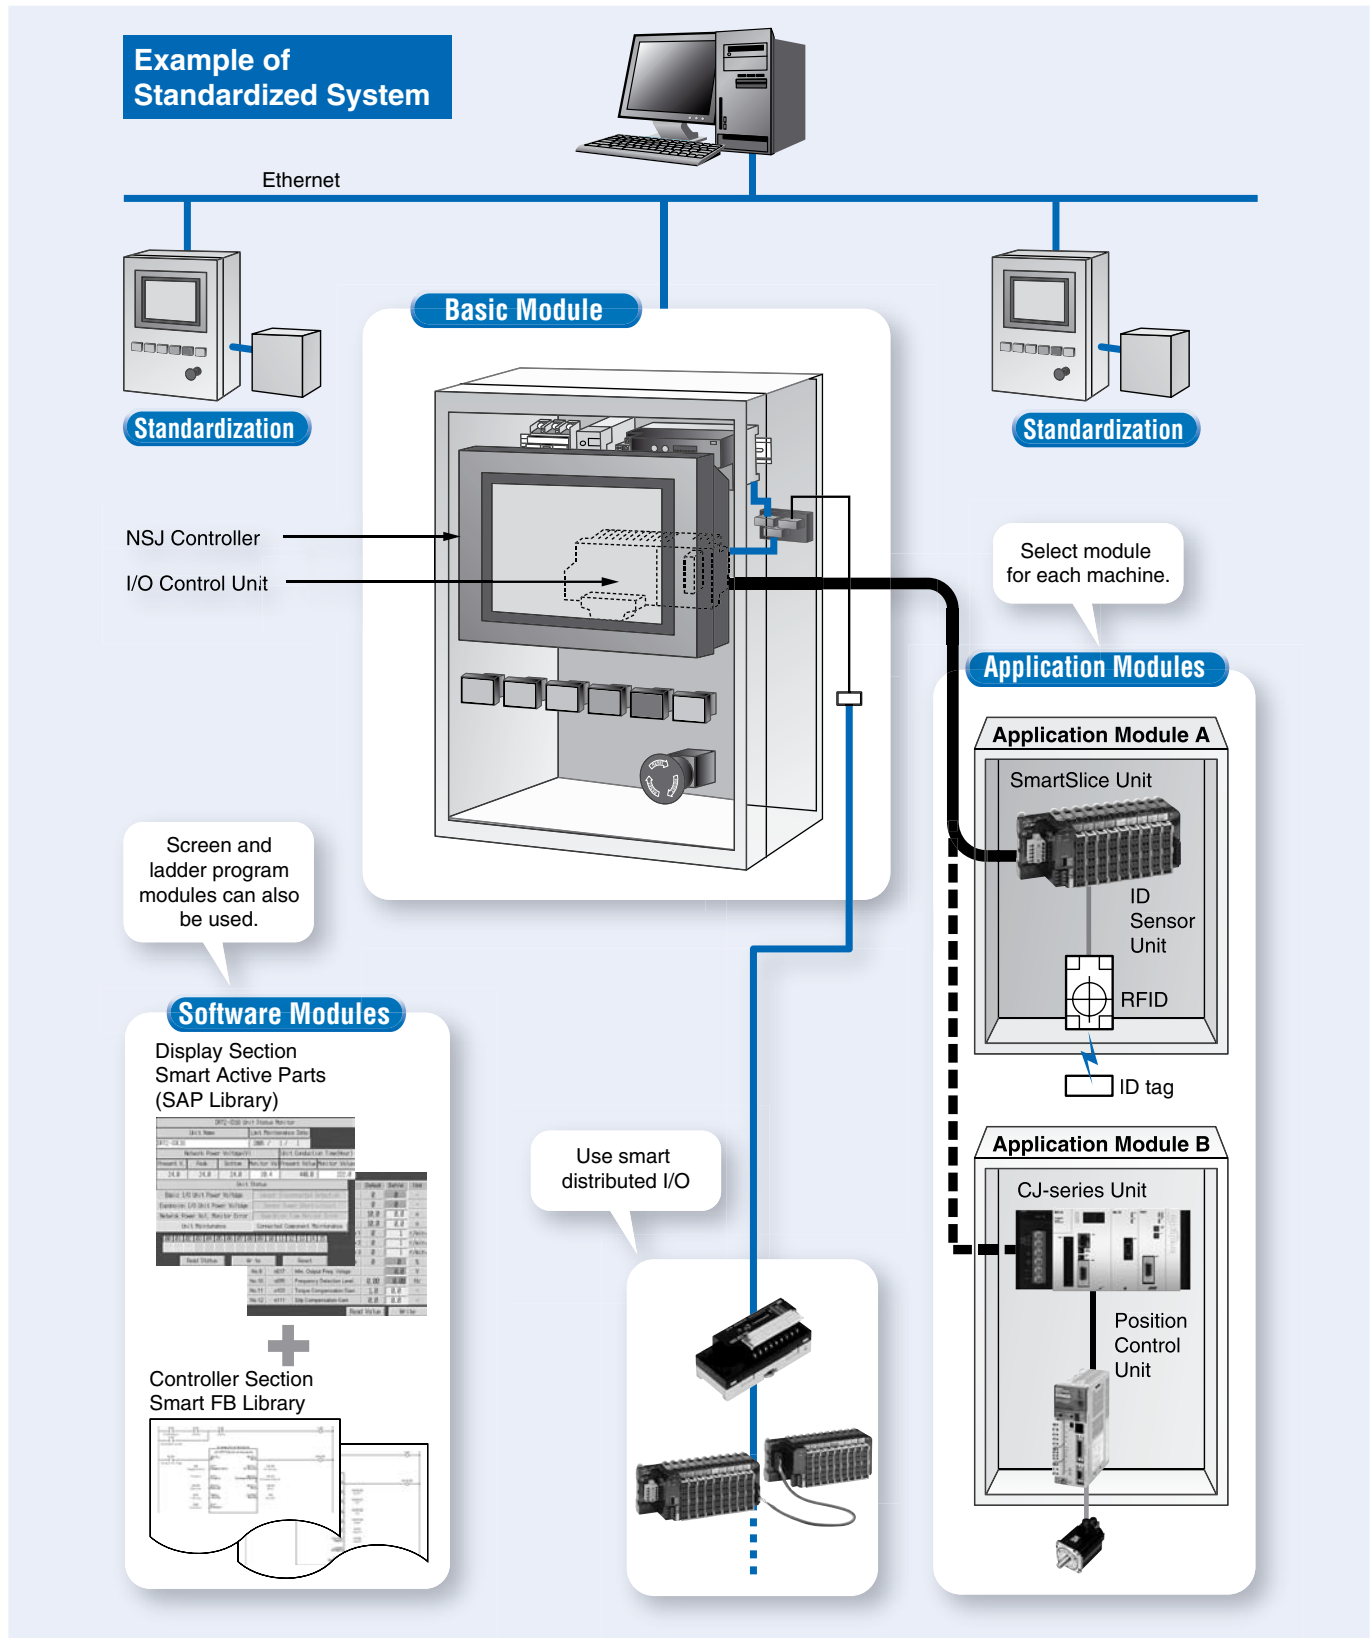

NS-series HMI: Outstanding connectivity

Many of equipment can be connected to the NS HMI and Sysmac One Series in addition to the variety of highly compatible OMRON control components.

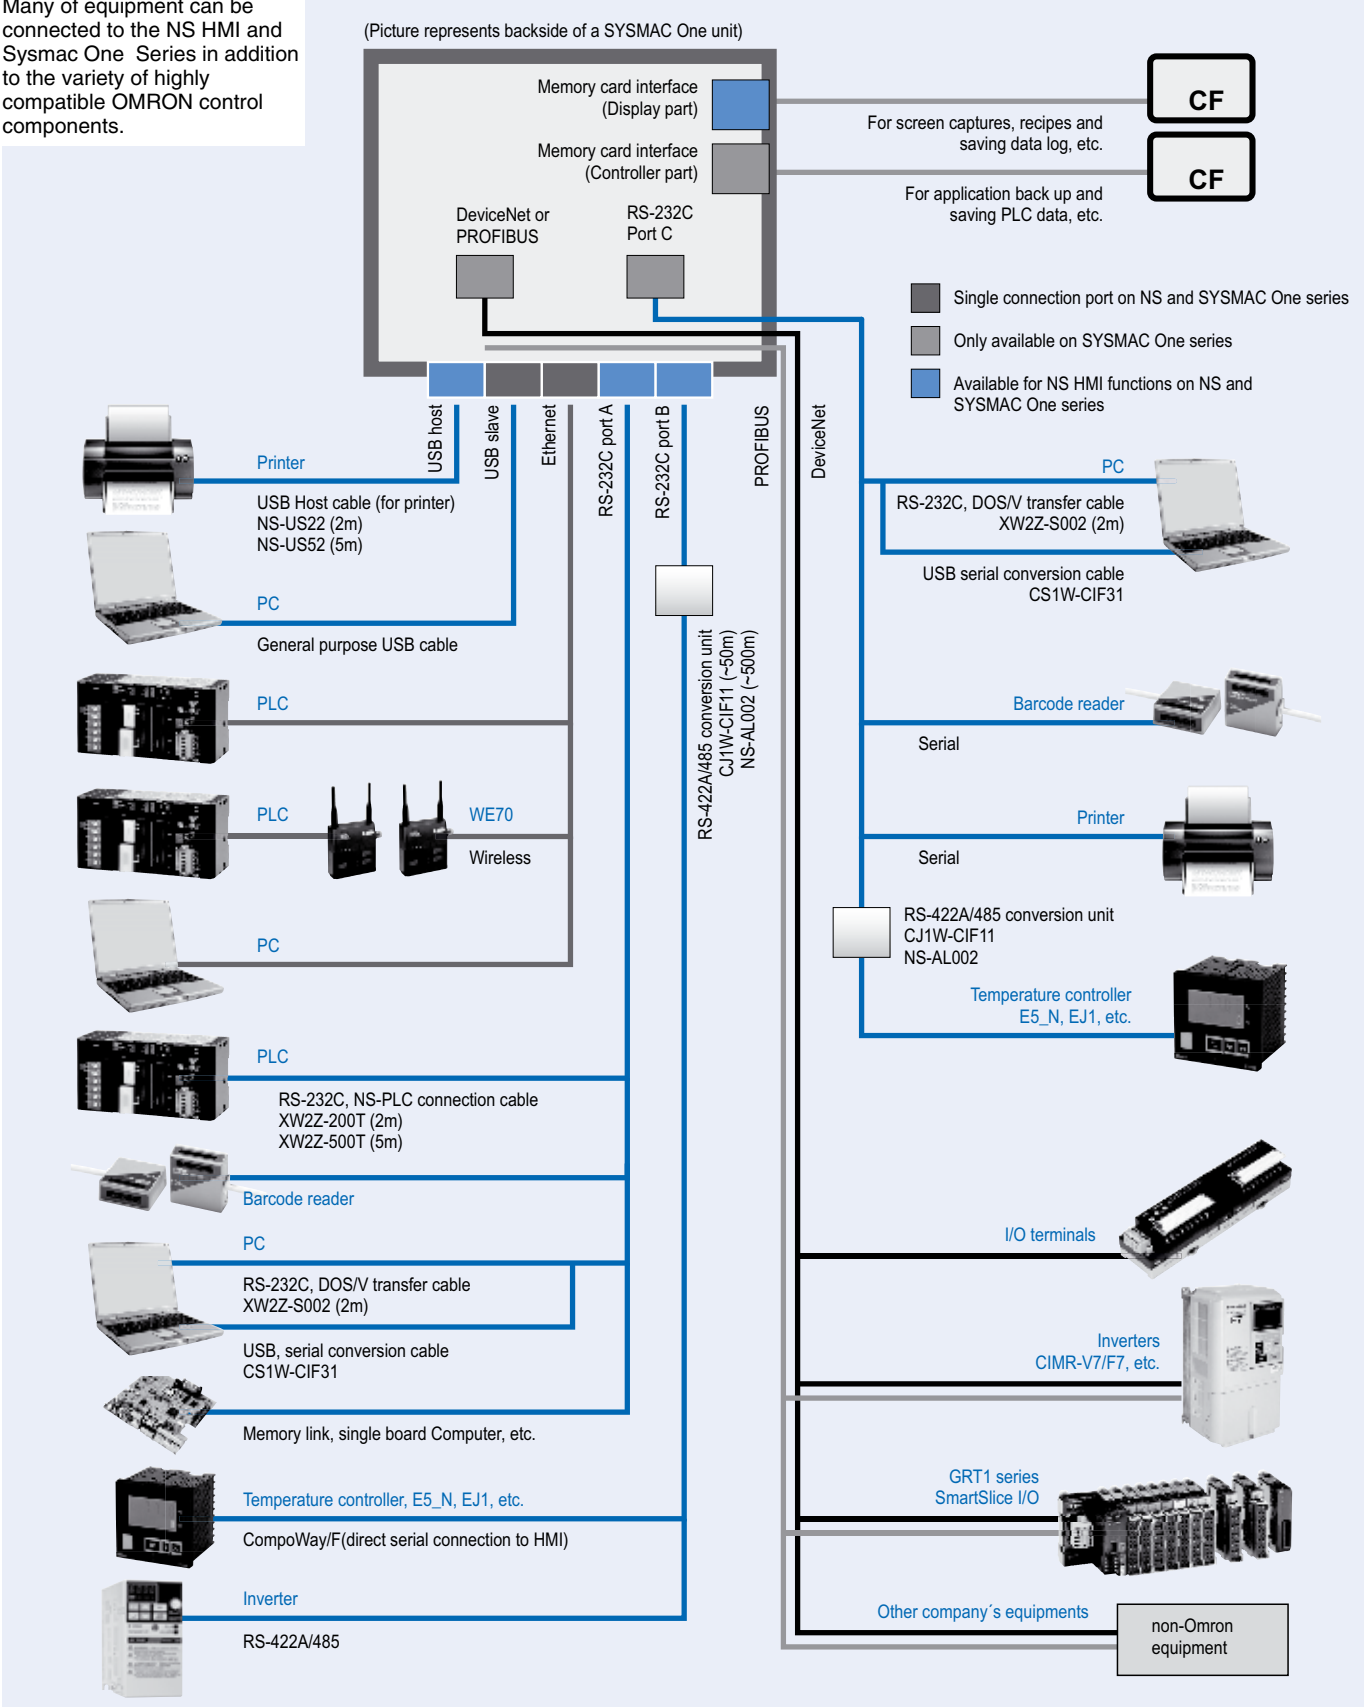

OMRON EUROPE B.V. Wegalaan 67-69, NL-2132 JD, Hoofddorp, The Netherlands. Tel: +31 (0) 23 568 13 00 Fax: +31 (0) 23 568 13 88 www.industrial.omron.eu

Austria

Tel: +43 (0) 2236 377 800
www.industrial.omron.at

Belgium

Tel: +32 (0) 2 466 24 80
www.industrial.omron.be

Czech Republic

Tel: +420 234 602 602
www.industrial.omron.cz

Denmark

Tel: +45 43 44 00 11
www.industrial.omron.dk

Finland

Tel: +358 (0) 207 464 200
www.industrial.omron.fi

France

Tel: +33 (0) 156 63 70 00
www.industrial.omron.fr

Germany

Tel: +49 (0) 2173 680 00
www.industrial.omron.de

Hungary

Tel: +36 1 399 30 50
www.industrial.omron.hu

Italy

Tel: +39 02 326 81
www.industrial.omron.it

Netherlands

Tel: +31 (0) 23 568 11 00
www.industrial.omron.nl

Norway

Tel: +47 (0) 22 65 75 00
www.industrial.omron.no

Poland

Tel: +48 (0) 22 645 78 60
www.industrial.omron.pl

Portugal

Tel: +351 21 942 94 00
www.industrial.omron.pt

Russia

Tel: +7 495 648 94 50
www.industrial.omron.ru

South-Africa

Tel: +27 (0)11 579 2600
www.industrial.omron.co.za

Spain

Tel: +34 913 777 900
www.industrial.omron.es

Sweden

Tel: +46 (0) 8 632 35 00
www.industrial.omron.se

Switzerland

Tel: +41 (0) 41 748 13 13
www.industrial.omron.ch

Turkey

Tel: +90 216 474 00 40
www.industrial.omron.com.tr

United Kingdom

Tel: +44 (0) 870 752 08 61
www.industrial.omron.co.uk

More Omron representatives
www.industrial.omron.eu

*Authorised Distributor:***Control Systems**

• Programmable logic controllers • Human-machine interfaces • Remote I/O

Motion & Drives

• Motion controllers • Servo systems • Inverters

Control Components

• Temperature controllers • Power supplies • Timers • Counters • Programmable relays
• Digital panel indicators • Electromechanical relays • Monitoring products • Solid-state relays
• Limit switches • Pushbutton switches • Low voltage switch gear

Sensing & Safety

• Photoelectric sensors • Inductive sensors • Capacitive & pressure sensors • Cable connectors
• Displacement & width-measuring sensors • Vision systems • Safety networks • Safety sensors
• Safety units/relay units • Safety door/guard lock switches