# **OMRON**



» Machine Management

realizing

# Machine Control at Your Fingertips. On-screen Machine Management.

Expanding markets in emerging countries, short product cycles, and diversifying customer needs are just some of the factors that create drastic changes for the production industry.

To win in severe global market competition, you have to continue to grasp industry changes quickly, understand user needs accurately, and provide diverse forms of added value.

OMRON will help you handle ever-changing customer needs with the three keywords of the NS Series.

#### Let Your Machines Evolve

#### **Best Match**

OMRON has provided even greater compatibility with OMRON PLCs and components to provide an advanced design process that lets you achieve appealing machines.

#### **Machine Management**

The NS Series transforms machine HMIs from simple operation panels and turns them into machine management tools.

#### **Proven Reliability**

The NS-series PTs have a proven track record that will take your machines to a higher level of reliability.





#### **The Best Match Possible**

The amount of work and cost of connecting to OMRON PLCs and components have been greatly reduced. The results is an incredible range of features that is possible only when unifying to one manufacturer. Connecting to the NJ-series Machine Automation Controller allows the machine designer to quickly achieve the features required by the user through support for improved troubleshooting and structured programming with structures and other new data types.



#### **Machine Management Tool**

The machine designer can easily implement PLC troubleshooting, machine troubleshooting, settings for servo drives, temperature controllers, and other control components, status monitoring of connected devices, and uploading/downloading of parameters.



#### **Proven Reliability**

In the ten years since initial marketing, OMRON has globally supplied numerous HMI solutions with the highly reliable NS Series at over 200 sales and service centers around the world.



# NS Series Lineup

This powerful lineup showcases OMRON's unique value.

Choose from 3 types to match your application and requirements.

#### **NS** Series

**Standard Models** 

Plentiful screen variations and diverse functions allow use in a wide variety of applications.

# inches Color TFT



#### NS15-TX

32,768 colors XGA 1024 x 768 pixels Screen memory size: 60 MB

USB Slave Controller Link Ethernet Video (RGB input only)
USB Master RGB output RS-232C x 2 Ladder Monitor RS-422A/485 Memory Card

# 2.1 inches Color TFT



#### NS12-TS

32,768 colors ■ SVGA 800 x 600 pixels

	Controller Link
Ethernet	Video
USB Master	Ladder Monitor
RS-232C x 2	Memory Card

# 10.4 inches Color TFT



#### NS10-TV

**■** 32,768 colors ■ VGA 640 x 480 pixels Screen memory size: 60 MB

Ethernet Video
USB Master Ladder Monitor
RS-232C x 2 Memory Card

# 8.4 inches Color TFT



#### NS8-TV

**■** 32,768 colors **■ VGA 640 x 480 pixels** Screen memory size: 60 MB

USB Slave	Video
Ethernet	Ladder Monito
USB Master	Memory Card
DC_222C v 2	1

# 7inches Color High-luminance TFT



#### NS5-TO

32.768 colors **■ QVGA 320 x 240 pixels** Screen memory size: 60 MB

RS-232C x 2 Memory Card

# .7 inches Color TFT



#### NS5-SO

32.768 colors ■ QVGA 320 x 240 pixels Screen memory size: 60 MB

Ethernet RS-232C x 2 Memory Card





#### NS5-MQ

■ 16 monochrome gradations ■ QVGA 320 x 240 pixels Screen memory size: 60 MB

USB Slave Ethernet RS-232C x 2 Memory Card

#### **NSH** Series

Hand-held Models

A hand-held version of the NS5 is now available to perform operations at the production site.





#### NSH5-SQR

**■** 32,768 colors **■ QVGA 320 x 240 pixels** 

USB Slave RS-232C/422A Memory Card

Equipped with a red switch for an emergency stop input. **■** Emergency stop (3 inputs)

# /inches Color TFT



## NSH5-SOG

**■** 32,768 colors **■ QVGA 320 x 240 pixels** 

USB Slave RS-232C/422A

Equipped with a gray switch for a stop input. ■ Emergency stop (3 inputs)

#### Hand-held PT Cable



RS-232C RS-422A

#### **NSJ** Series

Integrated Controller Models PT is unified with the Controller into one package to greatly help standardize equipment and reduce size.





#### NSJ12-TSDD-G5D

■ 32.768 colors

- SVGA 800 x 600 pixels
- Screen memory size: 60 MB

USB Slave	Controller Link
Ethernet	Ladder Monitor
USB Master	Memory Card
RS-232C x 3	DeviceNet

(Controller Section)

■ I/O points: 1,280 ■ Program capacity: 60K steps ■ Data Memory: 128K words

# 4 inches Color TFT



#### NSJ8-TV□□-M3D

- **■** 32,768 colors
- VGA 640 x 480 pixels
- Screen memory size: 60 MB USB Slave Controller Link Ladder Monitor Ethernet USB Master | Memory Card

RS-232C x 3 DeviceNet

(Controller Section)

■ I/O points: 640 Program capacity: 20K steps Data Memory: 32K words

# 7 inches Color TFT



#### NSJ5-SQ II-M3D/-G5D

- 32,768 colors
  QVGA 320 x 240 pixels
- Screen memory size: 60 MB

USB Slave Controller Link

RS-232C x 3 DeviceNet

(Controller Section) M3D

II I/0 points: 640

Program capacity: 20K steps | Program capacity: 60K steps

■ Data Memory: 32K words

Ethernet Memory Card

G5D **I** I/0 points: 1280

Data Memory: 128K words

# 10.4 inches Color TFT



#### NSJ10-TV□□-G5D

■ 32.768 colors

■ VGA 640 x 480 pixels

■ Screen memory size: 60 MB

USB Slave Controller Link

Ethernet Ladder Monitor USB Master | Memory Card RS-232C x 3 DeviceNet

(Controller Section)

■ I/O points: 1,280 ■ Program capacity: 60K steps ■ Data Memory: 128K words

# 4 inches Color TFT

#### NSJ8-TV□□-G5D

- **■** 32,768 colors
- **VGA 640 x 480 pixels**
- Screen memory size: 60 MB

USB Slave | Controller Link Ethernet Ladder Monitor USB Master | Memory Card RS-232C x 3 DeviceNet

(Controller Section)

■ I/O points: 1,280 ■ Program capacity: 60K steps ■ Data Memory: 128K words

# 7 inches Color High-luminance TFT

#### NSJ5-TQ II -M3D/-G5D

- 32,768 colors QVGA 320 x 240 pixels
- Screen memory size: 60 MB

USB Slave Controller Link Ethernet Memory Card RS-232C x 3 DeviceNet

G5D

M3D **II** I/O points: 640 II I/O points: 1280

■ Program capacity: 20K steps ■ Program capacity: 60K steps

Data Memory: 32K words

(Controller Section)

Data Memory: 128K words

#### Software

#### **CX-Designer**



Without screen creation and ladder programming, the CX-Designer Screen Design Software is so easy-to-use that anyone can master it.

#### **NS-Runtime**



This software enables PLC communications from a personal computer by manipulating PT screens created using the CX-Designer.

# A Revolutionary Best Ma The NS-series PTs provide revolutionary compatibility with the road-proven CS/CJ-series



# tch

PLCs and

Ax3 Ax4 Ax5

Axis Error Code

JOG Comno

#### The CS/CJ-series PLCs for the Reliability of a Proven Track Record

Features are provided to easily connect to CS/CJ-series PLCs to take advantage of their proven track record.

Many features that do not require screen creation or programming support everything from design through maintenance to take advantage of the compatibility of OMRON PLCs and PT and to serve as the face of your machines.





# Power Support for All User

From conceptual designs through commissioning, operation, and maintenance, the NS









#### **Troubleshooter**



NJ Troubleshooter

PLC Troubleshooter

Machine Troubleshooter



## Best Match with OMRON Products



**Smart Active Prarts (SAP)** 

With EtherNet/IP

**Direct Connection to Temperature Controllers** 

Face Plate Auto-Builder for NS



**Multi-language Support** 

17



**Multifunction Objects** 

18



Plentiful Graphing Functions



Screen Data
Security Functions





**Device Data Transfer** 





Beauty Screens and Objects

p21



CX-Designer Screen
Design Software

P 22-P 25


# Needs

Series supports every user need.





## Maintenance

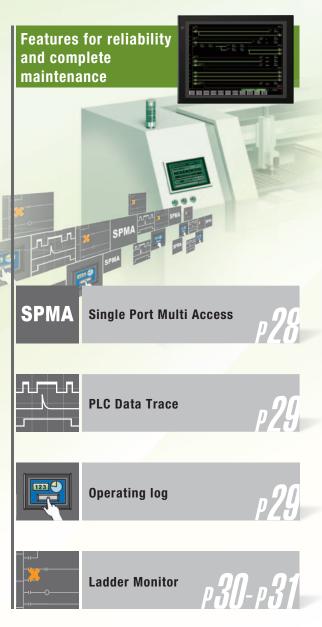

#### **Troubleshooter**

A Troubleshooter is provided for the connected OMRON Controller or PLC. This greatly reduces work requirements.

#### **NJ Troubleshooter**

#### **Controller Errors**

#### **Standard Feature for NJ-series Controllers**

Errors are automatically detected and displayed on-screen along with corrective actions for the CPU Unit function modules, EtherCAT slaves, and CJ-series Units that are connected in the NJ-series Controller. Whenever an error might occur, you can recover normal operation quickly to reduce downtime without using user manuals or Support Software on a computer.

NJ Controller







. Transfer



#### **User-defined Errors**

#### No Work Is Required to Create Alarm Screens.

Frames for alarm screens are provided as standard features in the NS-series PTs. You do not need to create screens to complete alarm screens.

Management of the meanings of alarms is unified on the Controller, so you do not have to register, add, or correct addresses on the NS-series PTs.



No screen creation is required










**Unified Alarm Definitions** 

GGG2 Upper part, Paper blocked

Image selection

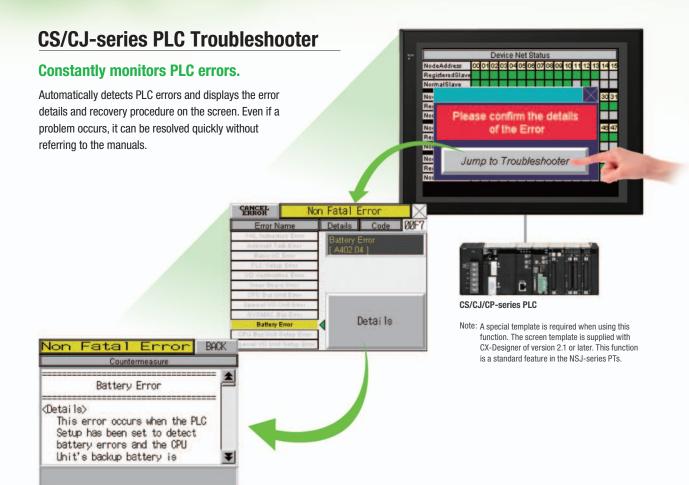


#### **Machine Troubleshooter**

#### **Easier Design of Machine Error Screens**

Individual error screens that were previously made for each error can now be integrated into one. It is possible to switch only the error details (text and screen) without ladder programming in conjunction with the alarm bit.

#### **Specific Example**

in conjunction with an alarm bit (See note.)

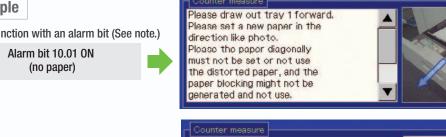

Alarm bit 10.02 ON (printing error)

Note: Alarms, PLC/PT memory, and other items can be selected for the switching trigger.



With this system, this frame is shared, and the

error details in the pink

frames are switched with an alarm or other

item as the trigger.

Text selection

#### **Best Match with OMRON Products**

NS Series is the most suitable HMI for the system that comprises OMRON components. The advantage is the "compatibility (reducing programming and screen data creation work)" which will reduce the amount of designing work.


No Screen Designing / No Programming

CPU Unit Error Log

CPU Unit Status Display

PLC CPU Unit monitoring screen

Device monitor

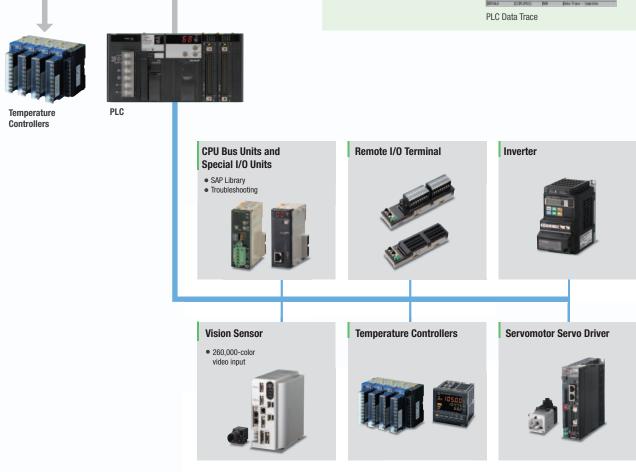

#### **Smart Active Parts (SAP Library)**

#### **Dramatically reduces the effort required** to create ladder programming and screens.


More than 3,000 Library parts (Smart Active Parts) are available, which can directly access OMRON PLCs and components. The objects can just be pasted from the Smart Active Parts (SAP Library) Library to the screen; it is completely unnecessary to create screens and ladder programming.

SAP Library, Temperature Controller Parts





The Temperature Controller's setting and monitor screens are completed in no time.

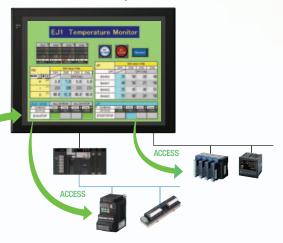

#### Support tool objects can be incorporated to check for errors and make settings. even without a computer.

Plenty of support tool objects (the Tool Function SAP Library) are available, which can be easily incorporate support tool functions in the NS-series PT. Just paste the support tool objects in the screen to check for errors and make settings, even without a computer.



#### Example screens using support tool objects (Tool Function SAP Library)






DeviceNet monitoring screen

#### **CPU Bus Unit and Special I/O Unit Troubleshooting Can Be Also Performed** with the SAP Library.

A Troubleshooter SAP Library is available to troubleshoot each Unit in the PLC. When an error occurs in a Unit, the Troubleshooter SAP Library provides an easy-to-understand explanation of the cause of the error as well as the countermeasures.

Note: The Troubleshooter SAP Library is included as a standard feature for the CX-One and CX-Designer. For details, refer to page 56. Successive development for Ethernet Units and MC Units is planned for the future.

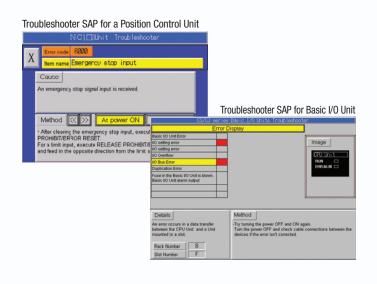

#### EtherNet/IP


#### **Support for data structures**


This special feature is made possible by combining an OMRON CJ2 PLC with an NS-series PT. The data structures that you define on the Programming Tool can be used on the CX-Designer simply by dragging and dropping them.

Note: An EtherNet/IP connection is required.

For CJ2 Series, CX-Designer version 3.2 or later, and NS system version 8.4 or later are required.


For NJ Series, CX-Designer version 3.3 or later, and NS system version 8.5 or later are required. Moreover, the multidimensional array is supported in the combination with NJ.



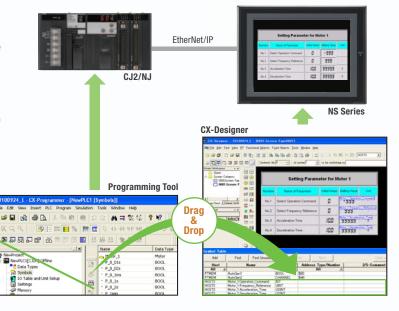

#### Tag access


**NS Series** 

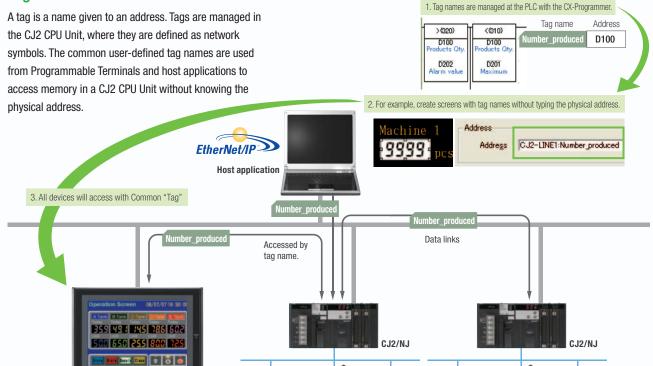




#### Simultaneous and parallel engineering

The host applications can be designed using the tag names of the PLC and PT. Parallel development will shorten the design time.

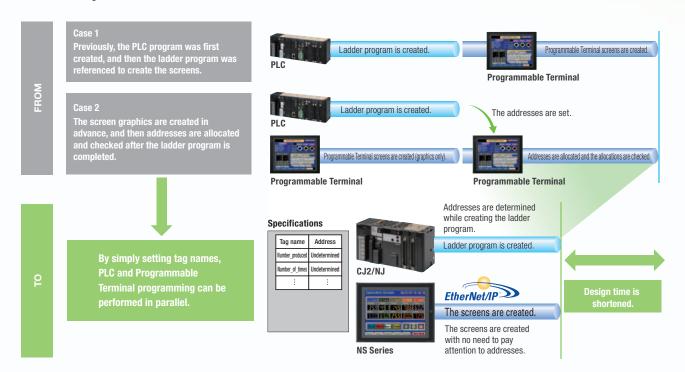

#### Minimize side effect of address changes

It is possible to access memory with tags, so the PT and host application are not affected even if the address of data in the PLC is changed.

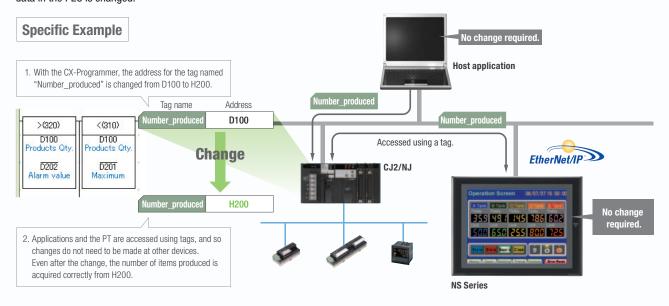


#### **Direct Connection to Temperature Controllers**

#### **Connect OMRON Temperature Controllers directly to the NS-series PT.**

OMRON Temperature Controllers can be connected directly to the NS-series PT's RS-232C port. Data does not pass through the PLC, so ladder programming is not required. Also, there are plenty of objects in the SAP Library for Temperature Controllers, and Temperature Controller screens can be created easily just by pasting objects from the SAP Library to the screens.

Note: An RS-422A Serial Adapter is needed to connect directly to a Temperature Controller. Refer to page 53 for a list of the Temperature Controllers that can be connected. A Conversion Unit is not required to connect to the RS-422A/485 serial interface of the NS15

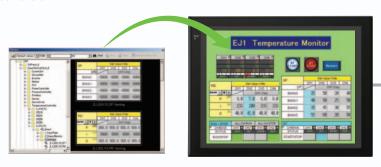

OMRON
Temperature
Controllers



#### **Face Plate Auto-Builder for NS**

# Screens for Loop Controllers can be easily and automatically created.

Significantly reduces the effort required to combine a Loop Controller with an NS-series PT.

Easy automatic generation of faceplates, such as faceplates for PV monitoring and SV setting, as well as tuning screens, such as screens to set and autotune PID constants.

A total of 17 function blocks are supported, with eleven function blocks, such as Ratio Setting and Motor Manipulators newly supported (version 3 of higher).

Comments are automatically entered for automatically assigned unit and scale settings when a project is generated (version 3 and higher).



Created screens are easily transferred to the NS by using a Memory Card or over the network.




CJ1W-CIF11 RS-422A Serial Adapter

> **CX-Process Tool** (Loop Controller Programming Software)

Loop Controller program
 creation (function block method)

●CSV tag file output

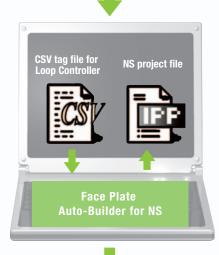



**CX-Designer** (NS screen creation software

Editing created dataCreation of other required screens

Note: Refer to the PLC-based Process Control Catalog (Cat. No. P051) and the Loop-control CPU Unit Catalog (Cat. No. R128) for details on Loop Controllers.



#### **Multi-language Support**

#### Support 42 languages and switch the language of the labels among up to 16 languages.

Unicode is supported and 42 Asian and European languages can be combined in screens. Also, it is possible to switch between up to 16 labels using the label switching function, so it is possible to support up to 16 languages in a single screen just by specifying the language to be displayed in each label.

#### Multi-language CSV data



The labels' text attributes can also be reflected when importing

When screen data is imported, text attributes can be applied to the specified labels and attributes such as the font and text color can be reflected to other languages labels.






**NS Series** 









#### **Multi-language conversion has** become much easier.

The screen data in the source language is exported to a CSV file and sent to a translation agency by e-mail for translation. Later, the translated CSV file is just imported to easily provide multi-language support.

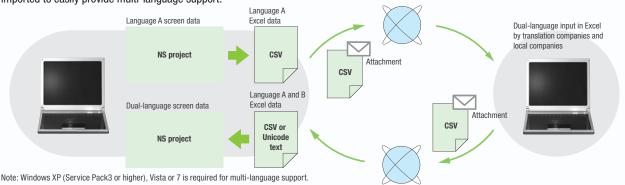

#### **Multi-language System Messages. Eight Languages Supported as Standard Feature**

The system program of NS-series PTs supports Chinese and European languages. All eight languages are a standard feature, including Chinese (traditional and simplified), Spanish, Italian, German, and French, in addition to the previous Japanese and English. Along with maintenance menus, messages for communications errors, communications settings, and screen transfers can be displayed in any of eight languages. Maintenance can be performed in the desired language. The language can be easily set using the NS-series PT or screen data.

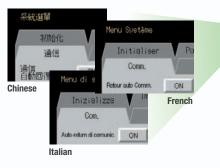



#### English system menu (maintenance menu)




#### **Multiple functions**

# Execute up to 32 functions with one Multifunction Object Multifunction Objects support Write Bit, Write Word, object control, and etc

Multifunction Objects combine the functions of multiple objects into one object. Multiple functions can be executed by pressing one button without using troublesome macros. Setup is easy. For example, a setting can be made on-screen using the Support Software to turn ON a bit to start a machine, set a value, and then change the screen.

Easy On-screen Setup with Support Software!

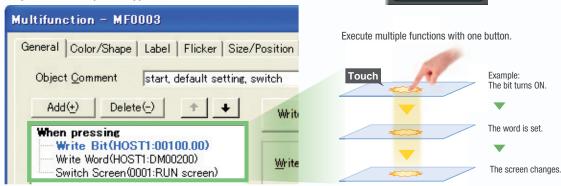

Multifunction execution with one object

Time the button is pressed

Set Numerals

Screen Switching


Bit. ON

#### **Multifunction Objects support four useful functions**

Switches that do not immediately operate when touched can be easily made without ladder programming.

Button pressed

Relay status

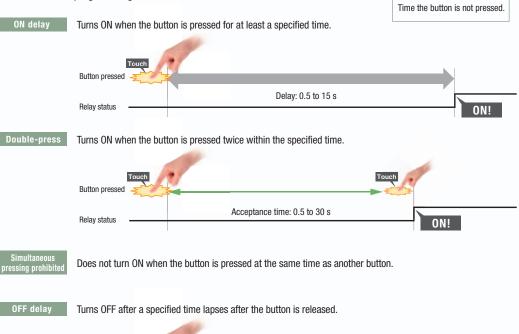

Delay: 0.5 to 15 s

OFF!


#### **Plentiful Graphing Functions**

#### **Data Log Graph (Trend Graph)**

Up to 128 data can be collected in the cycle of 500ms. Logging data is stored as a CSV file in the Memory Card inserted in the NS-series PT.

Logging data is stored as a CSV file in the Memory Card mounted in the NS-series PT. The data stored in the Memory Card can be read or deleted from the screen.

A log can be saved automatically, without any programming, just by selecting the Save the data periodically Option in the Data Log Setting Window.

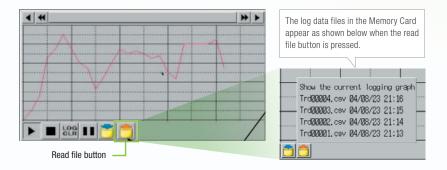

Suffixes are automatically added to file names set in the CX-Designer.





the Memory Card in CSV

L0G004.CSV 04/06/07 10:00 LOG005.CSV 04/06/08 10:00 L0G006.CSV 04/06/09 10:00 L0G007.CSV 04/06/10 10:00

L0G001.CSV 04/06/04 10:00

L0G002.CSV 04/06/05 10:00

L0G003.CSV 04/06/06 10:00

It is possible to make a one-week log by automatically saving the data seven times.


#### **Line Graph Function**

The data logged by the PLC can be displayed in overlapping graphs, so a device's operation can be compared for evaluation and analysis. In addition, up to 1,000 words of consecutive data can be displayed as a line graph, data can be displayed together, and any region can be magnified.

#### (1) Graphs can be superimposed.




#### (2) The display can be magnified.

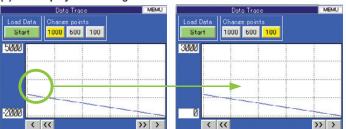

#### **Continuous Line Function**

Any position from the host (PLC) can be plotted as a graph. A graph can be plotted in any position by specifying the X and Y coordinates of the vertices. Also, the graph can be moved on the screen by specifying the movements from the PLC.

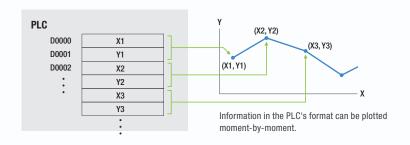

#### **Screen Data Security Functions**

# Protect important screen data with a password.

If password protection is set in the data transfer security settings when the screen data is designed, a password must be entered to download or upload the screen data, so important screen data can be protected.



If a password has been set, the password is required to transfer screen data (download or upload) with the Memory Card.

# A password between 4 and 64 characters long can be set. The download/upload will start if the user inputs the password that was set when the screen was designed. (Password input will be disabled if the wrong password is input 3 times in a row.)

#### **Device Data Transfer**

# Easy Data Exchange between the PLC and Components

For example, temperature controller alarm values can be transferred to the DM Area of the PLC's CPU Unit. No communications programming or macros are required.

#### **Multi-vendor Support**

Devices from multiple vendors are supported.

Data can be easily exchanged with PLCs from other companies and Modbus devices.

#### **Easy Settings**

To make the settings, simply specify the device and addresses of the transfer source and transfer destination in the CX-Designer. Settings can be made using the same procedure as for setting the addresses for normal components.


# Easier Operation when Combining SAP Library Objects


SAP data can also be exchanged. SAP data can be exchanged by checking the address of the SAP data in the dialog box of the SAP object pasted in the CX-Designer and specifying that address as the transfer source address.

Note 1: EtherNet/IP tags are not supported.

Note 2: CX-Designer version 3.1 or higher is required.

NS system version 8.2 or higher is required.

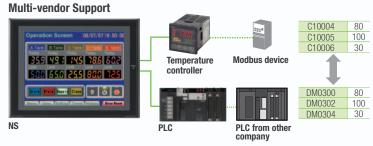

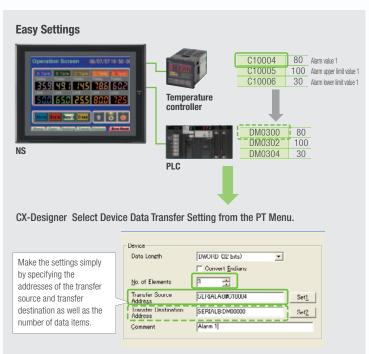



## **Beauty Screens and Objects**


#### "Cool" Screen Templates

Professionally designed screen templates are provided. There are seven different types of attractive screen templates for different themes. Simply select the best template from the library.



#### "Cool" Objects

Backgrounds, buttons, labels, message boxes, and other objects are also provided for various themes.

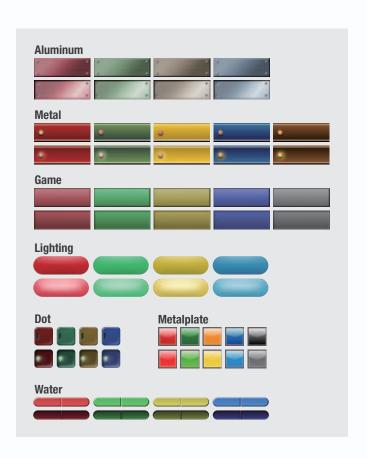

#### **Screen Designer for NS Series, CX-Designer**


#### **User-friendly Screen Creation**

Without screen creation and ladder programming, the CX-Designer Screen Design Software is so easy-to-use that anyone can master it. Quickly create the required screen by dragging and dropping objects. OMRON's unified development environment lets you drastically reduce the work required to create screens.


Note: The same type of Project Workspace and Output Window as in the CX-Programmer are provided for the user interface.

#### All addresses and comments can be managed using a single Symbol Table.

Shows a list of addresses, names, and comments used in project screen data. Addresses, names, and I/O comments for the CX-Programmer can also be imported.



Improved Icons and Help

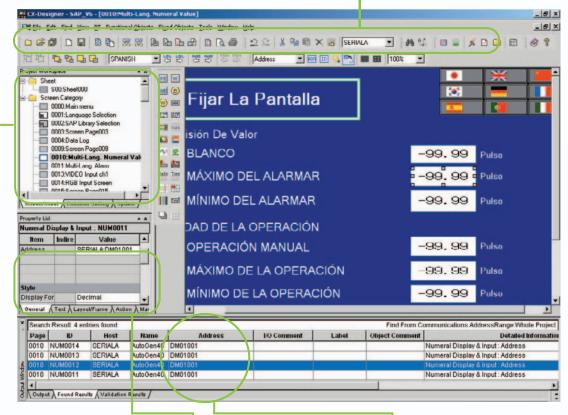

## The project Workspace enables the user to look through the entire project.

- Screens you want to edit can be opened right away.
- Perform screen management, such as copying or deleting screens, by simply right-clicking.
- Reusing screens from other projects is easy with the CX-Designer.
- Settings for alarms, data logs, communications, and other functions can be easily accessed.

#### Drastically reduce the number of clicks in the project.

Just click on the object once to display or change properties. Multiple objects can be selected to display and change shared properties all at once.

## The Output Window shows search results.


In addition to addresses and I/O comments used in screen data, labels can also be used as search strings and the results can be displayed.



#### **Reading the Symbol Table**

The symbol table created in the CX-Programmer during ladder programming can be read into the CX-Designer by dragging and dropping, so it isn't necessary to manually data such as input addresses and I/O comments. Tags (i.e., network symbols) can also be read into the CX-Designer.

Note: Version 8.0 or higher of the CX-Programmer support tags (i.e., network symbols).

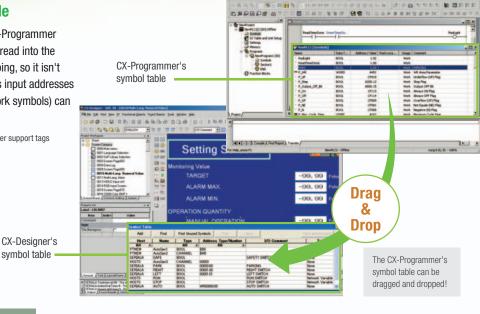

#### **Example of Reading the Symbol Table**

The symbol table read from the CX-Programmer can be directly dragged and dropped to the touch switch and lamp.



#### **Example of Easy Address Allocation**

00010.02 GreenLight BOOL P BUZZ 014:RGB Input Scree **Drag** & AR00426.0 TU00004 TU00003 Drop Timer Setting Timer Setting 2 RedTimerDone BOOL TU0000 SERIALA STOP\_BUZZER

00010.02


STOP BUZZER

Prepare to go/stop

(2) Check the comment then drag-and-drop the symbol from the symbol table to the property list.


#### **Example of Reading I/O Comments**


If Use I/O comment is selected in advance for the Use symbol text as label, the I/O comments are automatically used as labels when addresses are dragged and dropped from the symbol table. (If Use symbol names is selected, the symbol names are used as the labels.)

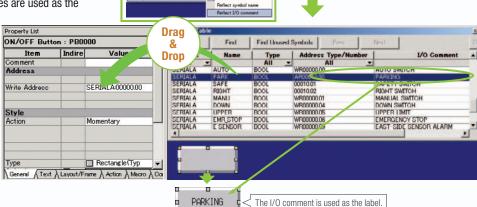

# Reading Another Project's Screens and Objects


Resources from another project can be easily reused by just selecting the screen or objects that you want to read and dragging and dropping it, so screens can be created intuitively.

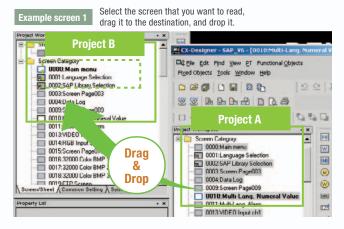

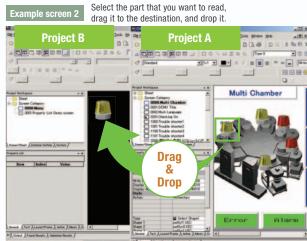



#### **Reading CAD Files**

It is possible to import DXF files by dragging and dropping them. The files are read as a diagram, and so less capacity is used than with images. It is also easy to customize the diagram by changing the shape or color.



The CX-Designer and CX-Programmer interconnects the test functions in the computer through the CX-Simulator. The screens and ladder program checks are performed simultaneously, which significantly increases debugging efficiency. The CX-Programmer also has a new button for integrated simulation. And, work efficiency is further improved with the ability to keep required work screens pinned on front and to zoom in or out as desired.

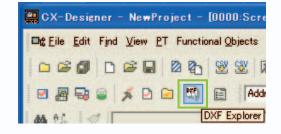

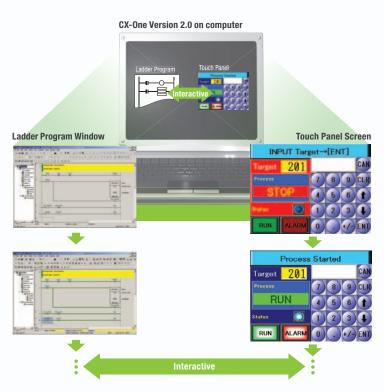

×




#### **Editing of Multiple Objects**


Addresses and other settings, such as labels and colors, can be set together in a list, making editing operations much more efficient. When the common attributes (such as background color and text color) of multiple parts are being changed, the attributes can

be changed together using the property list.

After editing the settings in the list, press the OK Button to make the new settings effective immediately.

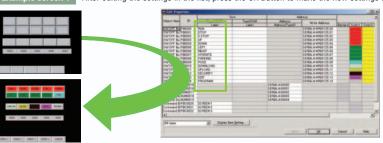

If the background color is changed from white to gray in the property list, the background color is changed for all of the selected objects.

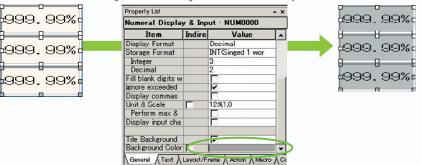

Select Object

#### **Editing of Overlapping Objects**

The Select Object command is a powerful tool when you want to edit object hidden by overlapping. A filter function can also be used to aid editing by displaying only the objects to be edited.

Object Selection Window
Right-click and select Select Part to display the objects (all types) on the screen.
ASSEMBLY LINE MONITOR
START STOP RESET PARKING
ALARM

Use the Select Part command's filter function to
select the objects (ON/OFF Button) that you want
to edit

Filter Function

ASSEMBLY LINE MONITOR	START	STOP	RESET	PARKING
STOP RESET PARKING	AUTO	MANUAL	UP	DOWN
LARM	LIM UP	LIM DN	SAFTY	DOOR
LLE   LLYLLO   LLYLLO	LEVEL1	LEVEL2	LEVEL3	LEVEL4

Only the edited object is displayed and it can be edited easily.

I HII types		L/alife Dele	I valige delection	
0	Object Comment	ID	X	Y
B		PL0000	96	136
B B		PL0001	200	136
<u></u>		PL0002	304	136
(B)		PL0003	408	136
(B)		PL0004	96	184
B B		PL0005	200	184
(B)		PL0006	304	184
(B)		PL0007	408	184
B) B)		PL0008	96	232
(B)		PL0009	200	232
(B)		PL0010	304	232
ğ		PL0011	408	232
(B)		PL0012	96	280
		PL0013	200	280
(B)		PL0014	304	280
B		PL0015	408	280
LAEEL		LBL0016	72	168
LAER		LBL0017	96	80

# Startup/Operation



# Equipment and workpiece movements can also be displayed in beautiful video


#### NS-CA001 Video Input Unit

Four video inputs or CCD cameras can be connected and up to four images can be displayed simultaneously if the image size is 320x240 pixels. The NS-CA001 cannot be used with the NS5 or the NS15.


#### NS-CA002 RGB/Video Input Unit

There is an analog RGB input terminal in addition to the two video input terminals. Either of the video signals or the analog RGB signal can be displayed on the NS-series PT. The NS-CA002 cannot be used with the NS5.

Note: Video input cannot be used with the NS15. Only RGB input can be used.

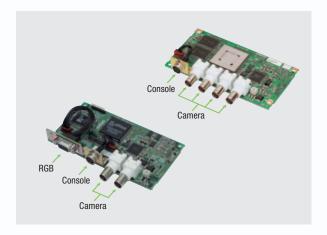

#### Also Compatible with OMRON Vision Sensors.

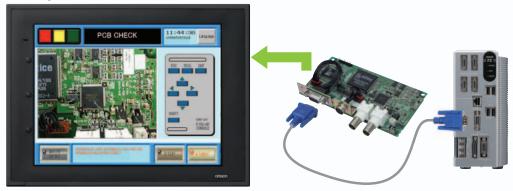

#### **Analog RGB Output**

# The NS screen is seen by another monitor.

The NS15 screen (XGA) can be displayed on an on-site display that has RGB inputs.

Note: Only NS15





#### **FTP Function**

# You can partially replace text and pictures from your computer.

FTP (File Transfer Protocol) has been added! Texts, lists, and recipes can be replaced with the put/get command from your computer! You can even replace BMP files from your computer easily.







#### **User Security Functions**

# Operator access rights and the operating format can be set to one of five password levels.

Each operator can be given one of 5 password levels using the User Security (level authentication) function. A password level can be set for each object, so various objects can be made inoperable or hidden based on the operator's access level.





Operator passwords are managed in 5 levels.
Passwords can be up to 16 characters long and the access rights increase as the level number increases.



The operator cannot manipulate objects with a password level (authentication level) higher than the operator's login level.

#### **NS with LED backlight**

#### NS5 color-type models (SQ/TQ models), NS8 models, NS10 models, NS12 models with LED backlight are newly released.\*


LED backlight allows backlight brightness adjustment of up to 32 levels. The brightness can be adjusted from the operation screens, and the RUN indicator changes its luminance according to the settings of the backlight brightness; it is favorable for ship and vessel applications.

\*LotNo.15Z0 or later of NS5 color-type models, LotNo.28X1 or later of NS8 models, LotNo.11Y1 or later of NS10 models, LotNo.14Z1 or later of NS12 models.

#### Conventional three-level adjustment



#### New 32-level adjustment




# Maintenance

#### **Single Port Multi Access (SPMA)**


#### Transfer ladder program data to the PLC via the PT. Perform online editing via the PT.

[ Computer (Serial/USB) → NS-series PT (Ethernet) → PLC (Ethernet or Controller Link) → PLC ]

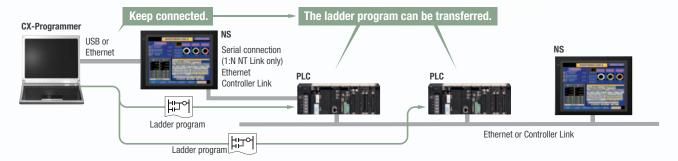

#### Transfer screen data via the PLC.

[Computer (Serial) → PLC (Ethernet or Controller Link) → NS-series PT ]

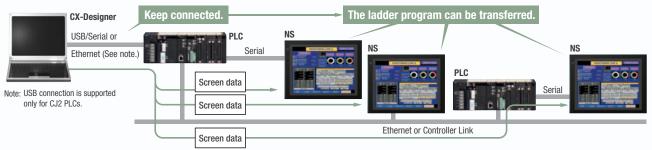

Note: SPMA can be used in CS/CJ-series PLCs with lot number 030201 or later.

Note: SPMA via a PLC is not supported when a CP-series PLC is connected. (SPMA via an NS-series PT is supported with a CP-series PLC.)

# Using a USB relay cable greatly improves debugging at equipment startup.

Use a USB relay cable to enable performing maintenance from in front of the control panel.


#### **Easy Automatic Connection**

A search is automatically made for the PLCs connected to the PT and the results are displayed using the automatic online connection function in the CX-Programmer. Just select a PLC from the list to connect. This function is also supported for PLCs over network layers.

CX-Programmer



- Note 1: SPMA can be used in CS/CJ-series PLCs with lot number 030201 or later.
- Note 2: SPMA via a PLC is not supported when a CP-series PLC is connected. (SPMA via an NS-series PT is supported with a CP-series PLC.)
- Note 3: CX-Programmer version 8.2 and higher support automatic online connection via the PT. NS system version 8.2 or higher is required.

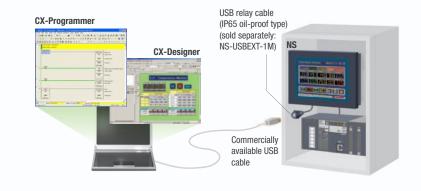

PLCs registered to the PT are automatically searched for.
Make the connection simply by selecting from the PLC list.




#### **PLC Data Trace**

#### The PLC data trace function can be used without a computer.

The PLC Data Trace function is built into the PT in addition to the Ladder Monitor and Device Monitor. A bit's status and operation can be viewed in a time chart just by setting the desired PLC bit's address in the PT. It is also now possible to display word data, save data in CSV files, and save time chart screens in BMP files.


- Note 1: There are differences between this Data Trace function and the CX-Programmer's Data Trace function. Refer to the NS-series Programmable Terminal Programming Manual (Cat. No. V073) for details.
- Note 2: The PLC data trace function cannot be used with the 5.7-inch
- Note 3: The PLC data trace function is not supported for connection with a CP1F PLC

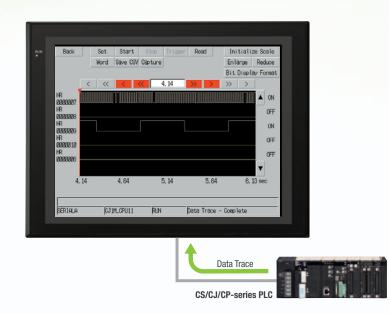

#### **Operating log**

#### What Was Touched When? can be recorded.

Functionality has been improved with the addition of a log to record operators' use of the panels. It is now possible to record and display the time, date, and operation details for buttons (i.e., hardware switches) pressed on the control panel in addition to operations on the touch panel. The operation log can be saved in a CSV file on a Memory Card mounted in the NS-series PT.

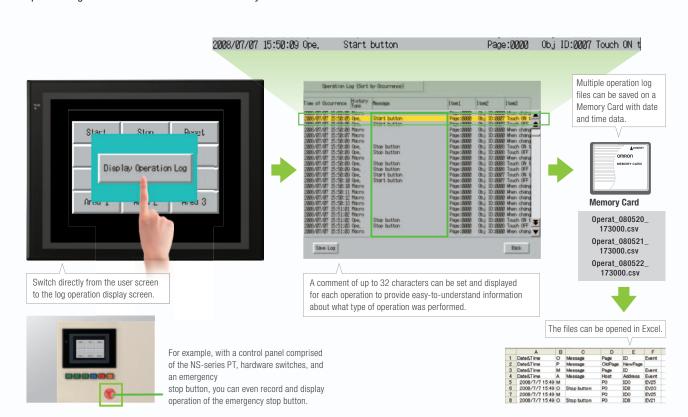


# Maintenance

#### **Ladder Monitor**

# The ladder program can be monitored without a computer.

Ladder programs with I/O comments can be monitored on the PT's screen and the ladder program can also be edited with the Programming Console function.



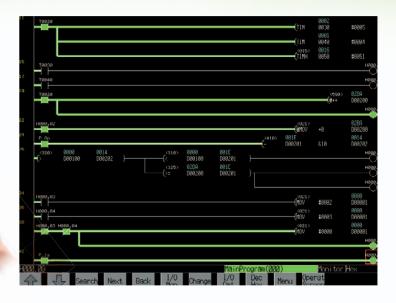

# Also meets the requirements of users who need to display devices onsite

#### **Switch Box Function**


The operator can check the PLC status by displaying just the I/O comments and status.


#### **Device Monitor Function**

Displays the device's contents, allowing settings to be input and checked and making startup operations more efficient.

# so no extra work to show I/O comments


Read I/O comments directly from the PLC. I/O comments do not have to be stored in a Memory Card.

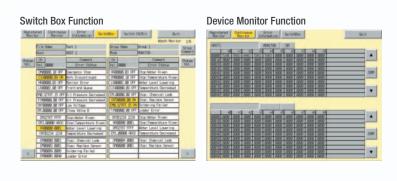

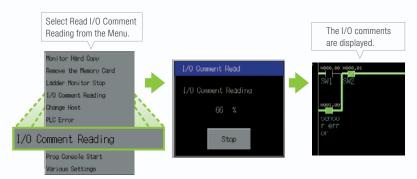

# Easy checking the alarm bit and shortens searching time.


When an alarm occurs, touch the message to automatically search for the alarm bit (output bit) for the alarm. This enables you to quickly check the alarm address and investigate why the bit turned ON.

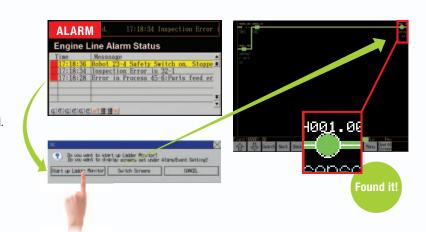





#### "Find Back", "Find Next", useful Function Supported by the NS-series.

Reduced Time to Investigate Which Output or Input Is Causing the Problem.



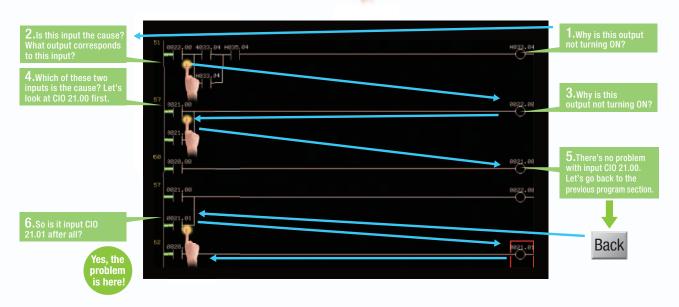

#### Force-setting and force-resetting are possible

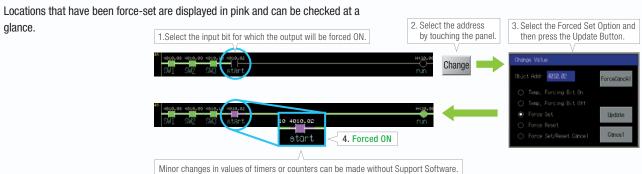

#### Check and Change I/O While You View the Ladder Diagram on the I/O Monitor

Display and change the present value by specifying the address. It is also possible to force-set/reset bits with the I/O monitor.




# **NS-Runtime**

#### **NS-NSRCL** (**NS-Runtime**)

# Achieve machine/line monitoring and data logging on your office computer.


#### **Machine Viewer**

Machine monitoring in an office environment. There is no need to create complex host applications. Moreover, when an alarm occurs, a PDF file can be displayed as maintenance information. NS Series screens can be reused on the computer, and screens can be also newly created independently of touch panels at the production site.

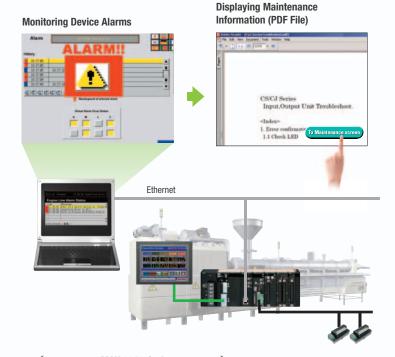

#### **Wide Screen**

Computer output can be displayed on another wide-screen monitor. XGA (1,024 x 768 dots) and up to a a maximum screen size of 3,840 x 2,400 is supported. Alarms occurring in devices or the line can be monitored.

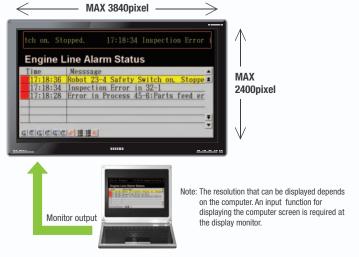

#### **Data Logger**

Log large amounts of data using a personal computer. Data can be logged through background processing, with up to 160,000 points stored in one file. The logged data is stored in CSV format, and data can be displayed on data log graphs.




#### Example: 160,000 Points

Data can be logged for approximately 7.4 days, assuming data is logged every two seconds for 12 hours a day. By using automatic file saving, data logging can be continued even longer than 7.4 days.

#### **Recipe Handling**

Checking machine data or switching processes from a host computer is easy. Parameter groups in the PLC can be transferred together to a computer, and the transferred data can be checked and edited in CSV format, e.g., using Excel. The edited data can then be transferred together back to the PLC.




CPM2A

#### **Easy Installation**


To get started, just install the NS-Runtime in the computer and place the screen data in the applicable folder. NS/NSJ-series screens and NS-Runtime screens can all be managed using one single tool.

Note: The NS-Runtime will operate in a computer environment even if the CX-Designer installed is not installed. The hardware key (USB dongle) that is supplied with the NS-Runtime is required for

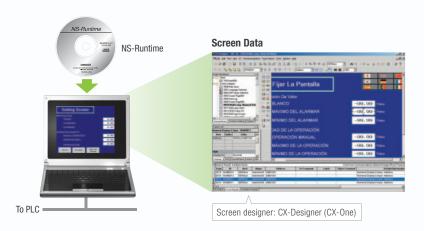

#### **Application Startup Function**

User applications can be started from NS-Runtime. Applications can be started simply by pressing buttons on the screen.

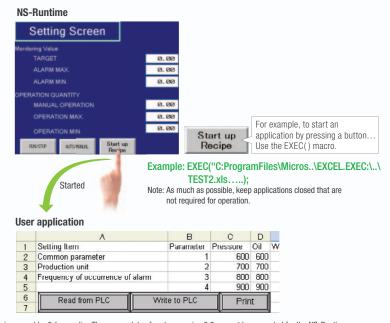

Note 1: If the screen data is converted for the NS Series, NS-Series PT system versions must be 8.1 or earlier. The screen data of system version 8.2 can not be converted for the NS-Runtime. Note 2: Do not use this product for 24-hour operation in an FA environment. OMRON shall not be responsible if the computer or application does not operate properly due to noise or other causes. OMRON shall not be responsible for any problems that may be caused by any applications other than OMRON products.

# Hand-held PT

#### **NSH5 Series**

A hand-held version of the NS5 is now available to perform operations at the production site. The NS-series PT's have a complete set of functions that can be used at the production site, such as the SAP Library, multi-language support, and Programming Console functions.

#### **Function Switches**

Use the ten functions switches.

F1, F2, F6, F7: Wired outputs F3 to F5, F8 to F10: Communications outputs



#### 3-Position **Enable Switch**

Increased safety with DPST-NO structure (wired outputs).





#### Memory Card Interface and **USB Slave Connector.**

Easily transfer screens or save logs at high speed using a USB connection.

#### **Emergency Stop Switch.**

3PST-NC Structure

DPST-NC: Increase safety (wired outputs). SPST-NC: Input to internal NSH5 memory, output to a lamp for emergency stop switch operation, or output via communications, e.g., to a PLC.

#### Water Resistance to IP65

The water-resistant structure is equivalent to IP65 on all surfaces. The PT may not be suitable for use in environments with long-term water exposure

#### PT and Cable Sold Separately

Select the Cable according to the application (RS-232C/RS-422A). Connector-loose wires, UL connector,

3 m or 10 m.

#### **Precautions for Emergency Stop Switches**

When using a hand-held NSH5 that will be installed and removed from a control panel or Removable Box, always use the specified Stop Switch (Gray/NSH5-SQG10B-V2) to conform to Safety Standards (EN 60204-1).



#### **Options**

Visor

#### Removable Box

A separate external circuit is not required because the Removable Box has been configured so that the emergency stop switch line will not turn OFF (i.e., so that the emergency stop circuit will operate) even when the NSH5 is removed.







Use to attach the NSH5 to a control panel.

Use when the NSH5 is in direct sunlight.



#### **Even Simpler Equipment Operation with Outstanding Synergy.**




#### **Features**

- 5.7 to 12.1 inch sizes are available.
- A hand-held version of the NS5 is now available to perform operations at the production site. The NS-series PT's have a complete set of functions that can be used at the production site.
- The Smart Active Parts(SAP Library) makes it easy to connect to OMRON PLCs and components, OMRON provides a development environment that requires with no programming and no screen designing.
- When an error occurs in a Unit in the OMRON PLCs, the Troubleshooter SAP Library provides an easy-tounderstand explanation of the cause of the error as well as the countermeasures.
- Ladder Monitor come as a Standard Feature. The ladder program can be monitored onsite without a laptop! Ladder monitor lets you monitor PLC program status, search for addresses or instructions, monitor multiple I/O points, and much more.
- Provides the FA integrated tool package "CX-One" for a Screen Design Software Integrated Simulation come as a Standard Feature. The integrated simulation function simulates ladder programs and screen data simultaneously even without the actual hardware.
- Screens support 42 languages and the Support Software supports eight. System messages can be displayed in eight languages.
- Single Port Multi Access (SPMA) come as a Standard Feature. The ladder program and screen data can be transferred from a single port!
- Connectable PLCs and devices appear one after another. Has become connectable with the PLCs of Mitsubishi Electric Corporation and the Inverters of OMRON Corporation.

#### **NS** Series

#### **Network**

Provides serial NT Link communications supporting both 1:1 and 1:N connections. The NT Link has more efficient communications than Host Link and its capabilities are especially apparent in applications with multiple PTs connect to the PLC. The NS-series PTs can also support communications with multiple PLCs and multiple NS-series PTs through Controller Link and Ethernet connections, so the network can be configured freely to match the requirements and scale of the application. In addition, using the NS-Runtime makes it possible to monitor machine status and log data from the host.

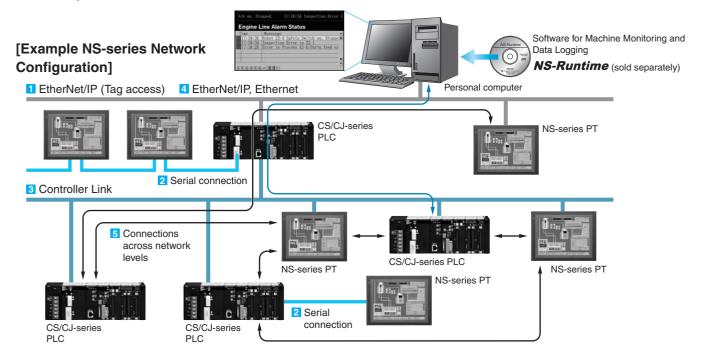

#### Configuration of CJ2 series and NJ series

#### 1 EtherNet/IP Connection (Tag accesses)


If an Ethernet-compatible NS-series PT is used, the PT can connect to a Controller with built-in EtherNet/IP and an Option Unit is not needed to connect at the PT.



## Configuration of CS series, CJ series and CP series


### 2 Serial connection

#### 1:1 NT Link or Host Link




#### 1:N NT Link

●NS:PLC ratio = 8:1 max. Up to 8 NS-series PTs can be connected to each of the PLC's RS-232C/RS-422A ports.



## 3 Controller Link Connection

The PT can be connected to an OMRON Controller Link network by mounting a Controller Link Interface Unit.

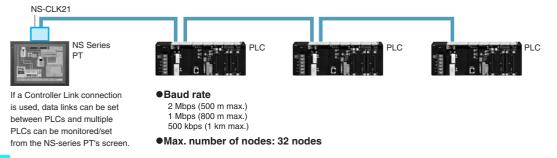

### 4 Ethernet Connection


If an Ethernet-compatible NS-series PT is used, the PT can connect to a PLC with an Ethernet Unit and an Option Unit is not needed to connect at the PT.



## Connections Over Network Levels


The NS-series PTs can connect to a variety of devices in the network, through as many as 3 network levels.

For example, if SAP (Smart Active Parts) are being used, an NS-series PT connected by Ethernet can be used to monitor the information in a PLC connected through Controller Link as well as the information in the DeviceNet Slaves connected to that PLC.

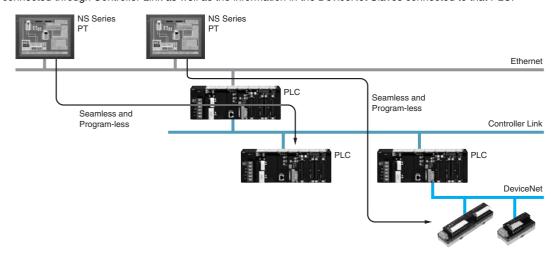


## **System Configuration**

## NS5/NS8/NS10/NS12/NS15

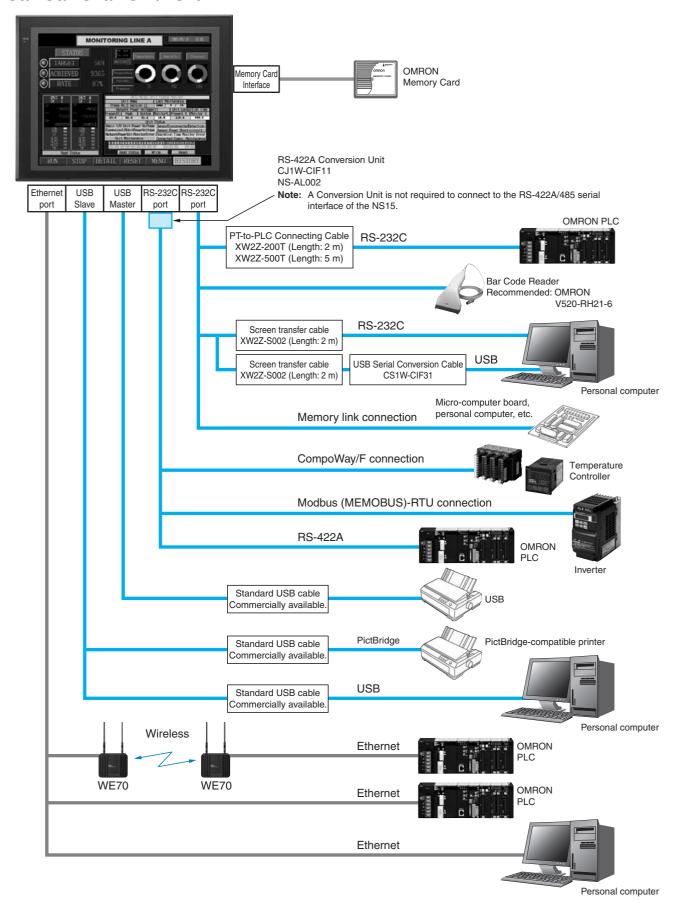


## **Expansion Bus Interface**

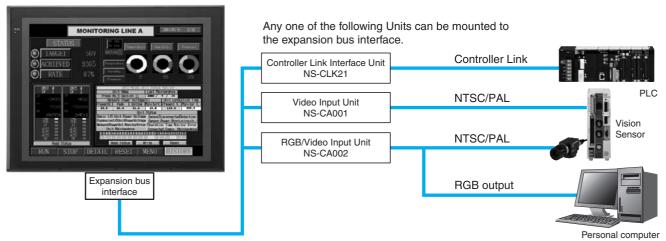

Note: Video Input Units and RGB Video Input Units cannot be used with some models.


### **Multi-vendor**

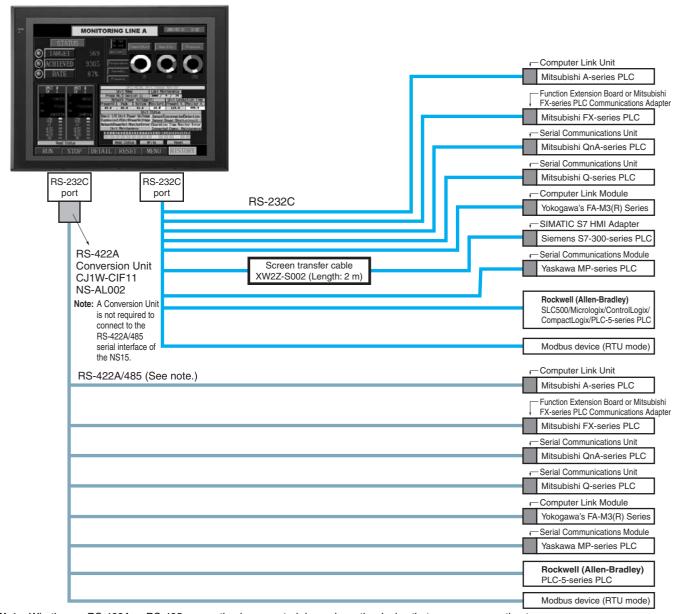

Note: Whether an RS-422A or RS-485 connection is supported depends on the device that you are connecting to.

For details, refer to the Connectable Devices page or NS-Series Programmable Terminals HOST CONNECTION MANUAL Multivendor Connection (Cat.V092).

### **NSH5 Hand-held PT**

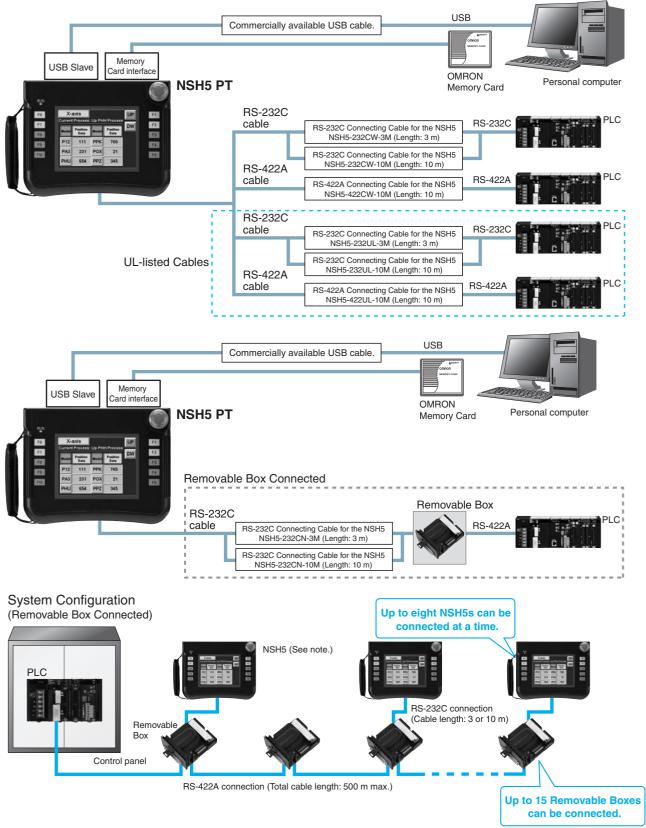

**Note:** Before removing the NSH5 from the Removable Box, be sure to first turn OFF the power supply key on the Removable Box.

## **Ordering Information**

### **International Standards**

- The standards are availabled as follows: U: UL, U1: UL (Class I Division 2 Products for Hazardous Locations), C: CSA, UC: cULus, UC1: cULus (Class I Division 2 Products for Hazardous Locations), CU: cUL, N: NK, L: Lloyd, and CE: EC Directives.
- Contact your OMRON representative for further details and applicable conditions for these standards.

## **Programmable Terminals**

Product name		Specifications	;		Model	Standards
Product name	Effective display area	Number of dots	Ethernet	Case color	Model	Standards
			No	Ivory	NS5-MQ10-V2	
	5.7-inch		NO	Black	NS5-MQ10B-V2	
	STN monochrome		V	lvory	NS5-MQ11-V2	
			Yes	Black	NS5-MQ11B-V2	
			NI-	lvory	NS5-SQ10-V2	
NS5-V2 *1	5.7-inch *2	320 × 240 dots	No	Black	NS5-SQ10B-V2	UC1, CE,
NS5-V2 " I	TFT color LED backlight	320 × 240 dots	Yes	lvory	NS5-SQ11-V2	N, L, UL Type4
	ŭ		res	Black	NS5-SQ11B-V2	7
	5.7-inch *2		No	lvory	NS5-TQ10-V2	
	High-luminance		No	Black	NS5-TQ10B-V2	
	TFT color		Vee	lvory	NS5-TQ11-V2	
	LED backlight		Yes	Black	NS5-TQ11B-V2	
NS8-V2			NI-	lvory	NS8-TV00-V2	
	8.4-inch *2 TFT LED backlight	640 × 480 dots	No	Black	NS8-TV00B-V2	UC1, CE,
		640 × 480 dois	Yes	lvory	NS8-TV01-V2	N, L
	ŭ		res	Black	NS8-TV01B-V2	
		640 × 480 dots	No	Ivory	NS10-TV00-V2	
NS10-V2	10.4-inch *2 TFT		INO	Black	NS10-TV00B-V2	
N310-V2	LED backlight		Yes	lvory	NS10-TV01-V2	
			res	Black	NS10-TV01B-V2	
			No	lvory	NS12-TS00-V2	UC1, CE,
NS12-V2	12.1-inch *2 TFT	800 × 600 dots	INO	Black	NS12-TS00B-V2	N, L, UL Type4
N312-V2	LED backlight	000 × 000 dois	Yes	lvory	NS12-TS01-V2	OL Type4
	_		165	Black	NS12-TS01B-V2	
	15-inch			Silver	NS15-TX01S-V2	
NS15-V2	TFT		Yes	Black	NS15-TX01B-V2	
NSH5-V2 *1	5.7-inch	220 v 240 dota	No	Black (Emergency stop button: Red)	NSH5-SQR10B-V2	LIC CE
Hand-held	TFT	320 × 240 dots	No	Black (Stop button: Gray)	NSH5-SQG10B-V2	UC, CE

<sup>\*1.</sup> As of July 2008, the image memory has been increased to 60 MB.

## **NS-Runtime**

Product name	Specifications	Media	Model	Standards	
		1license		NS-NSRCL1	
NS-Runtime	NS-Runtime Installer, PDF manual, hardware key (See note.)	3 licenses	CD	NS-NSRCL3	_
		10 licenses		NS-NSRCL10	

**Note:** A hardware key (USB dongle) is required for NS-Runtime operation.

## System Requirements

Item	Specifications
os	Windows XP (Service Pack 3 or higher), Vista, or 7 (Support 64-bit version for only Windows 7.)
CPU	Celeron, 1.3 GHz or higher (Recommended)
Memory size	HDD: 50 MB min., RAM: 512 MB min. (Windows 7: 1 GB min.). 50 MB is required for the Runtime alone. (An additional 280 MB is required if CX-Server is not already installed.)

<sup>\*2.</sup> Lot No. 15Z0 or later of NS5 color-type models, Lot No. 28X1 or later of NS8 models, Lot No. 11Y1 or later of NS10 models, Lot No. 14Z1 or later of NS12 models.

### **Software**

### ● How to Select Required Support Software for Your Controller

The required Support Software depends on the Controller to connect. Please check the following table when purchasing the Support Software.

Item	Omron PLC System	Omron Machine Automation Controller System
Controller	CS, CJ, CP, and other series	NJ-series
Programmable Terminals	NS-series	NS-series with an Ethernet port
Software	FA Integrated Tool Package CX-One	Automation Software Sysmac Studio

### ● FA Integrated Tool Package CX-One

Product na	Specifications	Number of licenses	Media	Model	Standards	
	The CX-One is a comprehensive software package that integrates Support Software for OMRON PLCs and components.					
FA Integrated Tool Package CX-One Ver.4.	CX-One runs on the following OS. Windows XP (Service Pack 3 or higher), Vista or 7 Note: Except for Windows XP 64-bit version	license *1	DVD *2	CXONE-AL01D-V4	_	
CX-One ver.	CX-One Version 4. ☐ includes CX-Designer Ver.3. ☐. For details, refer to the CX-One catalog (Cat. No. R134)					
	CX-Designer can still be ordered individually in the following model numbers.					
	Screen Designer for NS Series					
	Windows XP (Service Pack 3 or higher), Vista or 7  Note: Except for Windows XP 64-bit version					
CX-Desig Ver.3.□	The Ladder Monitor Software is included with CX-Designer Ver.3.□.  Note: The Ladder Monitor Software is used to monitor CS/CJ-series PLC ladder programs from an NS-series PT.  A Memory Card and Memory Card Adapter (both sold separately) are required to use the Ladder Monitor Software with the NS8-V1, NS10-V1, or NS12-V1, or with the NS8-V2, NS10-V2, or NS12-V2 with system program version 6.6 or lower.	1 license	CD	NS-CXDC1-V3	_	

**<sup>\*1.</sup>** Multi licenses are available for the CX-One (3, 10, 30, or 50 licenses). **\*2.** The CX-One is also available on CD (CXONE-AL□□C-V4).

### Automation Software Sysmac Studio

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. Each model of licenses does not include any DVD.

	Specifications				
Product name		Number of licenses	Media	Model	Standards
	The Sysmac Studio provides an integrated development environment to set up, program, debug, and maintain NJ-series Controllers and other Machine Automation Controllers, as well as EtherCAT slaves.	- (Media only)	DVD	SYSMAC-SE200D	-
Sysmac Studio Standard Edition Ver.1.□	Sysmac Studio runs on the following OS. Windows XP (Service Pack 3 or higher, 32-bit version) /Vista (32-bit version) /7 (32-bit/64-bit version)				
	The Sysmac Studio Standard Edition DVD includes Support Software to set up EtherNet/IP Units, DeviceNet slaves, Serial Communications Units, and Support Software for creating screens on HMIs (CX-Designer). For details, refer to the Sysmac Integrated Catalogue (P072).	1 license*	_	SYSMAC-SE201L	-

Note: To connect the NJ-series Controller, NS system version 8.5 or higher is required. CX-Designer version 3.3 or higher is also required. \*Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).

## **Cable**

Product name	Specifications		Model	Standards	
Cable *1	Screen transfer cable for DOS/V (CX-Designer $\leftrightarrow$ PT)	Length: 2 m	XW2Z-S002	_	
	USB-Serial Conversion Cable	Length: 0.5 m	CS1W-CIF31	N	
	USB relay cable	Length: 1 m	NS-USBEXT-1M		
	RS-422A cable (loose wires + D-Sub 9-pin)	Length: 10 m	NSH5-422CW-10M	_	
NSH5 Cables	RS-232C cable (loose wires + D-Sub 9-pin)	Length: 3 m	NSH5-232CW-3M		
	RS-232C cable (loose wires + D-Sub 9-pin)	Length: 10 m	NSH5-232CW-10M		
	RS-422A cable (loose wires)	Length: 10 m	NSH5-422UL-10M		
UL-compliant NSH5 Cable	RS-232C cable (loose wires + relay cable)	Length: 3 m	NSH5-232UL-3M	CU	
NOTIO GUDIC	RS-232C cable (loose wires + relay cable)	Length: 10 m	NSH5-232UL-10M		
	PT connection: 9 pins	Length: 2 m	XW2Z-200T		
PT-to-PLC	PLC connection: 9 pins	Length: 5 m	XW2Z-500T		
Connecting Cable *2	PT connection: 9 pins	Length: 2 m	XW2Z-200T-2		
	PLC peripheral port	Length: 5 m	XW2Z-500T-2		
NSH5 Removable Box	RS-232C Cable (connectors)	Length: 3 m	NSH5-232CN-3M	] _	
Cable	no-2320 Gabie (connections)	Length: 10 m	NSH5-232CN-10M		
NSH5 Removable Box	-	·	NSH5-AL001		
NSH5 Wall-mounting Bracket	-		NSH5-ATT02		
NSH5 Visor	_		NSH5-ATT01	1	

<sup>\*1.</sup> Use a standard USB Type A male to Type B type male Cable to connect the NS series PT to a personal computer (CX-Designer). Use a standard USB cable to connect the NS series PT to a PictBridge-compatible printer. USB cable type depends on the printer. \*2. To connect the NS series PT to NJ series Controller, using a commercially available 10/100-BASE-TX twisted-pair cable. For detail, refer to the NS series SETUP MANUAL (Cat. No.V083).

# **Options**

Product name	Specifications		Model	Standards		
Video Input Unit	Inputs: 4 channels Signal type: NTSC/PAL		NS-CA001	LIC1 CE		
	Input channels: 2 video channels and 1 RGB channel *1 Signal type: NTSC/PAL		NS-CA002	UC1, CE		
Special Cable for the	Cable length: 2 m		F150-VKP (2 m)			
Console	Cable length: 5 m		F150-VKP (5 m)	_		
Controller Link Interface Unit	For Controller Link Communications	NS-CLK21	UC1, CE			
RS-422A Adapter	Transmission distance: 500 m total length  Note: Use this model when connecting PT models without a VI  Note: PT models with the V□ suffix can also be connected.	□ suffix.	NS-AL002	-		
	Transmission distance: 50 m total length  Note: Only PT models with a suffix of V□ are connectable.  Use the NS-AL002 to connect models without a V□ suffi	х.	CJ1W-CIF11	UC1, N, L, CE		
		NS15	NS15-KBA04			
	Anti-reflection Sheets	NS12/10	NS12-KBA04			
	(5 surface sheets)	NS8	NS7-KBA04			
		NS5	NT30-KBA04			
Sheet/Cover *2	Destarting Occupy (5 mods)	NS12/10	NS12-KBA05			
	Protective Covers (5 pack) (anti-reflection coating)	NS8	NS7-KBA05			
	ζ,	NS5	NT31C-KBA05			
	Protective Covers (1 cover included) (Transparent)	NS15	NS15-KBA05N			
	Protective Covers	NS12/10	NS12-KBA05N	_		
	(5 covers included)	NS8	NS7-KBA05N			
	(Transparent)	NS5	NT31C-KBA05N			
	NT625C/631/631C Series to NS12/10 Series		NS12-ATT01			
	NT625C/631/631C Series to NS12/NS10 Series (Black)		NS12-ATT01B			
Attachment	NT610C Series to NS12/10 Series		NS12-ATT02			
	NT620S/620C/600S Series to NS8 Series		NS8-ATT01			
	NT600M/600G/610G/612G Series to NS8 Series		NS8-ATT02			
Memory	128 MB		HMC-EF183			
Card	256 MB		HMC-EF283			
	512 MB	HMC-EF583	0.5			
Memory Card Adapter			HMC-AP001	CE		
Replacement Battery	Battery life: 5 years (at 25°C)		CJ1W-BAT01			
Bar Code Reader	CCD handheld bar code reader (RS-232C interface)		V520-RH21-6			

<sup>\*1.</sup> One screen cannot display two video inputs simultaneously.


\*2. A Chemical-resistant Cover (NT30-KBA01) is available only for the NS5.

# **General Specifications**

## NS5/NS8/NS10/NS12/NS15

Series	NS5-V2	NS8-V2	NS10-V2	NS12-V2	NS15-V2							
Rated power supply voltage	24 VDC											
Allowable voltage range	20.4 to 27.6 VDC (24 VDC	£15%)										
Power consumption	15 W max.	5 W max. 45 W max.										
Ambient operating temperature	the mounting angle Mounting angle of • When no Expansi • When a Video Inpoperating temperating temperating	te: The ambient operating temperature is subject to the following restrictions according to the mounting angle.  Mounting angle of 0 to 30° to the horizontal:  • When no Expansion Units are mounted, the operating temperature range is 0 to 45°C.  • When a Video Input Unit or a Controller Link Interface Unit is mounted, the ambient operating temperature is 0 to 35°C.  Mounting angle of 30 to 90° to the horizontal: Operating temperature range of 0 to 50°C										
Storage temperature	−20 to 60 °C *1											
Ambient operating humidity	35 to 85% (0 to 40 °C), 35	to 60% (40 to 50 °C) (with	no condensation)									
Operating environment	No corrosive gases.											
Noise immunity	Conforms to IEC61000-4-4	4, 2 kV (power lines).			_							
Vibration resistance (during operation)	10 to 57 Hz, 0.075 mm an	nplitude, 57 to 150 Hz, 9.8 r	n/s² 30 min each in X, Y, a	nd Z directions	5 to 8.4 Hz, 3.5 mm single amplitude, 8.4 to 150 Hz, 9.8 m/s² 10 min times each in X, Y, and Z directions							
Shock resistance (during operation)	147 m/s <sup>2</sup> 3 times each in c	direction of X, Y, and Z										
Weight	1.0 kg max.	2.0 kg max.	2.3 kg max.	2.5 kg max.	4.2 kg max.							
Degree of protection		uivalent to IP65 oil-proof typuble in locations with long-te		2								
Ground	Ground to 100 $\Omega$ or less.											
Battery life	5 years (at 25 °C): Replac	e battery within 5 days afte	r the battery runs low (indic	ator lights orange).								
Applicable standards	Certified for conformance	to UL 508, UL 1604, EMC	Directive, NK, and LR Stand	dards.								

- **\*1.** Operate the PT within the temperature and humidity ranges shown in the right diagram. **\*2.** Support for NS5, NS10, NS12 and NS15.



## **NSH5 Hand-held PT**

Series		NSH5-V2							
Туре	5.7-inch Color TFT (Hand-held Version)								
Case color	Black								
Built-in Ethernet port	No								
Model	NSH5-SQR10B-V2 (Emergency stop button: Red)	NSH5-SQG10B-V2 (Stop button: Gray)							
Rated power supply voltage	24 VDC								
Allowable voltage range	20.4 to 27.6 VDC (24 VDC ±15%)								
Power consumption	10 W max.								
Ambient operating temperature	0 to 40°C	40°C							
Storage temperature	00 to 60°C								
Ambient operating humidity	35% to 85% (0 to 40°C) with no condensation								
Operating environment	No corrosive gases.								
Noise immunity	Common mode: 1,000 Vp-p (between power supply termir Normal mode: 300 Vp-p Pulse width: 100 ns to 1 µs, Rise time: 1-ns pulse	nals and panel)							
Vibration resistance (during operation)	10 to 57 Hz, 0.075 mm amplitude, 57 to 150 Hz, 9.8 m/s <sup>2</sup> s	30 min each in X, Y, and Z directions							
Shock resistance (during operation)	147 m/s² 3 times each in direction of X, Y, and Z								
Weight	1 kg max.								
Degree of protection	Equivalent to IP65.								
Ground	Ground to 100 $\Omega$ or less.								
Battery life	5 years (at 25°C): Replace battery within 5 days after the b	pattery runs low (indicator lights orange).							
Applicable standards	Certified for conformance to UL 508, EMC Directive, and E	N 60204-1.							

# **Performance/Specifications**

## NS<sub>5</sub>

Series							NS	5-V2					
Model		NS5- MQ10- V2	NS5- MQ11- V2	NS5- MQ10B -V2	NS5- MQ11B -V2	NS5- SQ10- V2	NS5- SQ11- V2	NS5- SQ10B- V2	NS5- SQ11B- V2	NS5- TQ10- V2	NS5- TQ11- V2	NS5- TQ10B- V2	NS5- TQ11B- V2
Built-in Ether	net port	No	Yes	No	Yes	No	Yes	No	Yes	No	Yes	No	Yes
Case color		Ivory		Black		Ivory		Black		Ivory		Black	
Display device	e	STN Mone	ochrome LC	CD		TFT color	LCD			Color Hig	h-luminano	e TFT *1	
Effective disp	olay area	Width 117	'.2 $ imes$ height	88.4 mm (5	5.7 inches)								
Display color	s	16 gradati	ions			256 colors	S						
Number of do	ots			240 dot vert		1							
View angle		Left/right:	Left/right: 45°, Top: 20°, Bottom: 40° Left/right: 80°, Top: 80°, Bottom: 60° *5										
Screen data o	capacity	60 Mbytes	50 Mbytes										
Image data (BMP or JPG	images)	16 gradati	ions			32,768 co	lors						
Memory Card		Supported	t e										
Ladder Monit	or function	Not suppo	orted										
Video Input U	Init support	Not suppo	orted										
Controller Lir Unit (Wired) s		Not suppo	orted										
	Service life * 3	50,000 ho	urs min.			75,000 ho	ours min.						
Backlight *2	Brightness adjustment	There are touch pan		at can be se	et with the	Three-lev	el or 32-lev	el brightnes	ss adjustme	ent from the	e touch par	el screen. *	5
	Backlight error detection *6	Error is de	etected auto	omatically, a	and the RU	N indicator	flashes gre	een as notif	ication.				
-	Method	Matrix res	atrix resistive membrane										
Touch panel (matrix	Number of switches/ resolution	300 (20 h	00 (20 horizontal $ imes$ 15 vertical) 16 $ imes$ 16 dots for each switch										
type)	Input	Pressure-	essure-sensitive										
	Service life	1,000,000	touch oper	rations.									
	Labels	Can be sp	ecified in C	X-Designer	r. Font, styl	le, and size	can be spe	ecified.					
Display text	Numerals, alarms, and character strings	Rough: Standard: Fine:	tandard: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8										
	Supported languages (42 languages)	Japanese Finnish, N ian, Belari	, simplified lorwegian, l usian, Russ	Basque, Ca	aditional Cl talan, Dani n, Macedor	hinese, Kor sh, Albania nian, Ukrair	rean, Englis in, Croatian nian, Georg	h, French, , Czech, Hı ian, Iceland	ungarian, P	olish, Rom	anian, Slov	ain, Swedish rak, Slovenia ın, Greek, Tı	an, Bulgar-
	Color	Monochro	me, 16 gra	dations		256 colors	S						
Text attributes	Font style (only when vector font is specified)	Bold or ita	ılic										
attributes	Vertical alignment	Top, cente	er, or bottor	m									
	Horizontal alignment	Left-justifi	ed, centere	d, or right-ju	ustified								
Flicker	Objects supporting flicker	Functiona Fixed obje		Select from t			tered flicke	r settings. T	The flicker s	speed and	flicker rang	e can be set	:-
Numeral units settings	s and scale	1.000 max	κ.										
Alarm/event	settings	5,000 max	х.										
Expansion in	terface	For Expar	nsion Interfa	ace Units									
M NOT TO	orioo (biah lun	. —	CT\			L - L - C NO	- 00	1 1		12			

- \*1. NS5-TQ series (high luminance TFT) luminance is better than that of NS5-SQ series by about 110 cd/m<sup>2</sup>.
- \*2. Contact your nearest OMRON representative to replace the backlight.
  \*3. This is the estimated time before brightness is reduced by half at room temperature and humidity. It is not a guaranteed value.
  The service life will be dramatically shortened if PT is used at low temperatures. For example, using the PT at temperatures of 0°C will reduce the service life to approximately 10,000 hours (reference value).
- \*4. The brightness cannot be adjusted much.
- \*5. Lot No. 15Z0 or later of NS5 models.
- \*6. This function does not indicate that the service life has been reached. It detects when the backlight is not lit due to a disconnection or other

Backlight error detection indicates that all backlights (2) are OFF.

## NS8/NS10/NS12/NS15

Series			NS	3-V2			NS1	0-V2			NS1	2-V2		NS	15-V2
Model		NS8- TV00- V2	NS8- TV01- V2	NS8- TV00B -V2	NS8- TV01B -V2	NS10- TV00- V2	NS10- TV01- V2	NS10- TV00B -V2	NS10- TV01B -V2	NS12- TS00- V2	NS12- TS01- V2	NS12- TS00B -V2	NS15- TX01S- V2	NS15- TX01B- V2	
Built-in Ether	net port	No	Yes	No	Yes	No	Yes	No	Yes	No	Yes	No	Yes	Yes	Yes
Case color		Ivory		Black		Ivory		Black		Ivory		Black		Silver	Black
Display devic	e	High-de	finition TF	T color L	CD	High-de	finition TF	T color L	.CD	High-de	finition TI	FT color L	.CD	High-defir	)
Effective disp		Width 17 (8.4 inch	nes)	ight 128.2	? mm	Width 2 <sup>-</sup> (10.4 inc		ight 162.4	1 mm	Width 2- (12.1 inc		ight 184.	5 mm	Width 304.1 × height 228.1 mm (15 inches)	
Number of do				ıl × 480 do	ot vertical					800 dot vertical	horizonta	al × 600 d	ot	1,024 dot × 768 dot	horizontal
View angle		Left/righ Bottom:	t: 80°, To	p: 80°,		Left/righ Bottom:	t: 70°, To	p: 65°,			nt: 80°, To	p: 80°,			80°, Top:
Screen data o	capacity	60 Mbyt				Dotto	00 0			Dotto	00 0			70,2000	00
lmage data (BMP or JPG	images)	32,768	colors												
Memory Card		Support													
Ladder Monit		Support												(Only RG	B input is
Video Input U	• •	Support	ed (Imag	e displaye	ed via vid	eo input i	s 260,000	colors)						enabled.)	
Controller Lir Unit (Wired) s		Not supp				Support	ed								
Backlight *1	Brightness adjustment	·	i0,000 hours min.  Three-level or 32-level brightness adjustment from the touch panel screen. * 3											Adjustable in steps using touch panel operation or steples: adjustment is possible using external variable Resistor (minimum brightness: 15 cd/m²).	
	Backlight error detection *4	Error is	detected	automatio	cally, and	the RUN	indicator	flashes (	green as i	notificatio	n.			, ,. 	
	Method	Matrix resistive membrane						Analog resistive membrane *5							
Touch panel (matrix type)	Number of switches/ resolution			al × 24 ver each switc				ntal × 30 v each swite		1,900 (50 horizontal $\times$ 38 ve 16 $\times$ 16 dots for each switch				Resolution: 1,024 (horizontal) × 1,024 (vertical)	
	Input		e-sensitiv												
	Service life Labels			operations in CX-De		ont otylo	and size	oon ho c	posified						
Display text	Numerals, alarms, and character strings	Scalable Rough: Standare Fine: Ma	e Gothic: Magnifica	Mation: 1> ication: 1> on: 1>	agnificati <1, 1×2, 2 ×1, 1×2, 2 <1, 1×2, 2	on: 6 to 2 2×1, 2×2, 2×1, 2×2, 2×1, 2×2,	55 points 3×3, 4×4 3×3, 4×4 3×3, 4×4	6 , 8×8 , 8×8 , 8×8							
	Supported languages (42 languages)	Scalable Japanes Finnish, Bulgaria	7-segment display: Can display only numerals, dates, and times.  Scalable Gothic, rough, standard, and fine can be used for 42 languages.  Japanese, simplified Chinese, traditional Chinese, Korean, English, French, German, Italian, Portuguese, Spain, Swedish, Dutch, Finnish, Norwegian, Basque, Catalan, Danish, Albanian, Croatian, Czech, Hungarian, Polish, Romanian, Slovak, Slovenian, Bulgarian, Bulgarian, Russian, Serbian, Macedonian, Ukrainian, Georgian, Icelandic, Afrikaans, Faroese, Indonesian, Greek, Turkish, Estonian, Latvian, Lithuanian, Thai (supported only with scalable Gothic font)												
Text attributes	Font style (only when vector font is specified)	256 cold				,		-							
	Vertical alignment Horizontal	•	nter, or bo												
	alignment Objects	,		tered, or i	· ,		s of regi	stered flic	ker sattin	as The f	licker ene	ed and fli	cker rand	je can be s	et
Flicker	supporting flicker	Fixed ob				ee flicker		stered IIIC	NGI SEIIIII	go. IIIe II	norei spe	ou allu III	onei iaily	je can be s	o
Numeral unit		1.000 m													
Alarm/event		5,000 m		torfood III	nite										
Expansion in	rour pearest ON	· · · ·		terface U		the dead	all aula t								

- **\*1.** Contact your nearest OMRON representative to replace the backlight.
- \*2. This is the estimated time before brightness is reduced by half at room temperature and humidity. It is not a guaranteed value. The service life will be dramatically shortened if PT is used at low temperatures. For example, using the PT at temperatures of 0 °C will reduce the service life to approximately 10,000 hours (reference value).
- \*3. Lot No. 28X1 or later of NS8 models, Lot No. 11Y1 or later of NS10 models, Lot No. 14Z1 or later of NS12 models.
- \*4. This function does not indicate that the service life has been reached. It detects when the backlight is not lit due to a disconnection or other errors. Backlight error detection indicates that all backlights (2) are OFF.
- \*5. An analog touch panel is used with the NS15. Do not press the touch panel in two or more places simultaneously. If the touch panel is pressed in two or more places simultaneously, it may activate a switch between the points that are pressed.

## **NS** Series

## **Communications**

## NS5/NS8/NS10/NS12/NS15

		Interface	One ATA-Compact Flash interface slot				
Memory Card	Memory Card		Used to transfer and store screen data, store logging data, and store history data. (Alarm/Event History, Operation Log, and Error Log generated during Macro execution).				
	Port A	Connector	Conforms to EIA RS-232C. D-Sub female 9-pin connector 5-V output (250 mA max.) through pin 6. The 5-V outputs of serial ports A and B cannot be used at the same time.				
Serial		Functions	Host (PLC) access: 1:N NT Links (connections with CS/CJ/CP-series PLCs and C200HX/HG/HE(-Z) PLCs), 1:1 NT Links, or Host Link (connections with C Series or CVM1/CV-series PLCs) Direct access to Temperature Controllers using Smart Active Parts: CompoWay / F and bar code reader connections (Read directly from display.)				
Communications		Connector	Conforms to EIA RS-232C. D-Sub female 9-pin connector. 5-V output (250 mA max.) through pin 6. The 5-V outputs of serial ports A and B cannot be used at the same time.				
	Port B	Functions	Host (PLC) access: 1:N NT Links (connections with CS/CJ/CP-series PLCs and C200HX/HG/HE(-Z) PLCs) or 1:1 NT Links (connections with C Series or CVM1/CV-series PLCs)  Direct access to Temperature Controllers using Smart Active Parts:  CompoWay / F and bar code reader connections (Read directly from display.)				
<u> </u>		USB rating	USB1.1				
USB		Connector	TYPE-B (Slave)				
SLAVE Specifications		Functions	Connection with the CX-Designer (for screen data transfers) Connecting to a PictBridge-compatible Printer Recommended printers: EPSON: PM-G4500, PX-G5300, PX-5600, EP-901F  Canon: PIXUS MX7600, PIXUS iP100, PIXUS iX5000				
	USB HOST Specifications *1		USB1.1				
			TYPE-A (Host)				
Specifications *1			Connection with a printer (for hard copies) Recommended printers: EPSON: PX-G930				
Built-in Ethernet		Conformance standards	Conforms to IEEE 802.3/Ethernet (10 Base-T/100 Base-TX).				
Specifications *2		Functions	Host (PLC) access and connection with the CX-Designer (for screen data transfers)				
0		Baud rate	2 M/1 M/500 K bps				
Controller Link (Wired- type) Specifications *3		Transmission path	Shielded twisted-pair cable (special cable)				
		Functions	Host (PLC) access and data links				
Video Input Specifications *4		Resolution	NS-CA001: 320×240, 640×480, 800×600 dots NS-CA002: User-defined size				
		Input signal	NS-CA001: NTSC composite video or PAL NS-CA002: NTSC composite video or PAL				
		Number of video inputs	NS-CA001: Number of cameras: 4 max. NS-CA002: 2 cameras + RGB				

<sup>\*1.</sup> Except NS5.

\*2. NS - - 1-V2 only.

\*3. Except NS5 and NS8.

\*4. Except NS5 and NS15. NS15 provides RGB input. (NS-CA002)

## **Connectable Devices**

## Supported OMRON PLCs

DI C series	DI O a dal a a	RS-232C *1			Ethe	0	
PLC series	PLC model name	1:1	1:N	Host Link	FINS *2	EtherNet/IP *3	Controller Link *4
	CQM1	Yes	No	Yes	No	No	No
	CQM1H	Yes	Yes	Yes	No	No	Yes
	CPM1	Yes	No	Yes	No	No	No
	CPM1A	Yes	No	No	No	No	No
C Series	CPM2A	Yes	No	Yes	No	No	No
C Series	CPM2C	Yes	No	Yes	No	No	No
	C200HS	Yes	No	Yes	No	No	No
	C200HE (-Z)	Yes	Yes	Yes	No	No	Yes
	C200HG (Z)	Yes	Yes	Yes	No	No	Yes
	C200HX (-Z)	Yes	Yes	Yes	No	No	Yes
CVM1/CV Series	CV500/1000/2000	Yes	No	Yes	Yes	No	Yes
	CVM1	Yes	No	Yes	Yes	No	Yes
	CS1H	No	Yes	Yes	Yes	Yes	Yes
CS Series	CS1G	No	Yes	Yes	Yes	Yes	Yes
	CS1D	No	Yes	Yes	Yes	Yes	Yes
	CJ1H	No	Yes	Yes	Yes	Yes	Yes
	CJ1G	No	Yes	Yes	Yes	Yes	Yes
CJ Series	CJ1M	No	Yes	Yes	Yes	Yes	Yes
	CJ2H	No	Yes	Yes	Yes	Yes	Yes
	CJ2M	No	Yes	Yes	Yes	Yes	Yes
	CP1H	No	Yes	Yes	Yes	Yes	No
CP Series	CP1L	No	Yes	Yes	Yes	No	No
	CP1E	No	Yes	Yes	No	No	No
NJ Series	NJ5	Yes *5	Yes *5	Yes *5	No	Yes	No

<sup>\*1.</sup> To connect a NS with a PLC via a RS-422A connection, OMRON's NS-AL002, or CJ1W-CIF11 RS-232C/RS-422A Converter can be used to convert the RS-232C port on the NS to RS-422A.

\*2. A NS with Ethernet port is necessary.

When connecting a PLC with the NS, an Ethernet port is necessary on the PLC, too. Use a PLC CPU Unit with a built-in Ethernet port, or add an Ethernet Unit.

\*3. A NS with Ethernet port is necessary.

When connecting a PLC with the NS, an EtherNet/IP port is necessary on the PLC, too. Use a PLC CPU Unit with a built-in EtherNet/IP port, or add an EtherNet/IP Unit.

- \*4. Install a Controller Link Interface Unit on the NS. A Controller Link Unit is necessary for the PLC.
- \*5. Mount a Serial Communications Unit on the NJ-series Controller. A NS can access only to the Controller's memory used for CJ-series unit.

# **Function Comparison**

PLC series	PLC model name	Ladder Monitor	Device Monitor/ Switch Box	PLC Data Trace	SPMA	SAP	EtherNet/IP Tag access (Network symbols)	PLC Troubleshooter	NJ Troubleshooter
	CQM1	No	No	No	No	No	No	No	No
	CQM1H	No	No	No	No	No	No	No	No
	CPM1	No	No	No	No	No	No	No	No
	CPM1A	No	No	No	No	No	No	No	No
C series	CPM2A	No	No	No	No	No	No	No	No
C series	CPM2C	No	No	No	No	No	No	No	No
	C200HS	No	No	No	No	No	No	No	No
	C200HE (-Z)	No	No	No	No	No	No	No	No
	C200HG (-Z)	No	No	No	No	No	No	No	No
	C200HX (-Z)	No	No	No	No	No	No	No	No
CVM1/CV series	CV500/1000/2000	No	No	No	No	No	No	No	No
	CVM1	No	No	No	No	No	No	No	No
	CS1H	Yes	Yes	Yes	Yes	Yes	No	Yes	No
CS series	CS1G	Yes	Yes	Yes	Yes	Yes	No	Yes	No
	CS1D	Yes	Yes	Yes	Yes	Yes	No	Yes	No
	CJ1H	Yes	Yes	Yes	Yes	Yes	No	Yes	No
	CJ1G	Yes	Yes	Yes	Yes	Yes	No	Yes	No
CJ series	CJ1M	Yes	Yes	Yes	Yes	Yes	No	Yes	No
	CJ2H	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
	CJ2M	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
	CP1H	Yes	Yes	Yes	Yes *1	Yes	No	No	No
CP series	CP1L	Yes	Yes	Yes	Yes *1	Yes	No	No	No
	CP1E	No	No	No	Yes *1	Yes	No	No	No
NJ series	NJ5	No	Yes *2	No	No	Yes *3	Yes	No	Yes

<sup>\*1.</sup> The SPMA relaying a PLC is not supported.
\*2. Only Device Monitor function is supported. Monitoring function that uses tags (variables) is not supported.
\*3. The SAP for CJ-series Special I/O Units and CPU Bus Units that can be used with NJ-series Controller is supported.

## **Connectable Inverters**

Series	Communication Unit	Connection	
3G3MX2	(Use the RS-485 terminal on the Inverter)		
3G3JX	(Use the RS-485 connector on the Inverter)	RS-485 (2-wire)	1:N
3G3RX	(Use the RS-485 terminal on the Inverter)		

## **Connectable Temperature Controllers**

The following Temperature Controllers can be connected directly to an NS-series  $\mathsf{PT}^\star.$ 

Unit name	Series	Model	Remarks
Modular Temperature Controller	EJ1	EJ1-EDU End Unit	
Modular Temperature Controller	E5ZN	E5ZN-SCT24S Terminal Unit	
Digital Controller	E5AR	E5AR-00000-FLK	
Digital Controller	E5ER	E5ER-00000-FLK	
		E5CN-□□□□T-FLK Multi-input (Thermocouple/Resistance Thermometer) Type	
		E5CN-□□□□□L-FLK Analog Input Type	
	E5AN/E5EN/E5CN (Basic Model)	E5EN-\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	SAP screens are
	(Basic Model)	E5EN-□□□□L-FLK Analog Input Type	available.
Temperature Controller (Digital Controller)		E5AN-□□□□T-FLK Multi-input (Thermocouple/Resistance Thermometer) Type	
(2.3	E5AN-H/E5EN-H/ E5CN-H (Advanced Model)	E5AN-	
		E5CN-HODOD-FLK Universal-input Model	
		E5EN-HODODO-FLK Universal-input Model	
		E5AN-H	
	E5GN	E5GN-□□□TC-FLK Thermocouple Input Type	
	EDGIN	E5GN-□□□P-FLK Resistance Thermometer Input Type	

<sup>\*</sup> The NS-Runtime cannot be connected directly to a Temperature Controller.


## **Connecting to Another Company's PLC**

Manufacturer	Series	CPU	Communication Unit/Adapter/Board	Connection diagram		
	A Series	A1SHCPU A2USCPU A2USHCPU-S1	Computer Link Unit A1SJ71UC24-R□ A1SJ71UC24-PRF	RS-232C, - RS422A/485 *1	1:1	
		A2ACPU	Computer Link Unit AJ71UC24			
	FX Series	FX0N FX1S FX1N FX1NC FX2N FX3UC FX3G	Communication special adapter FX3U-232-ADP FX2NC-232ADP FX0N-232-ADP  Communication expansion board FXIII-232-BD	RS-232C, RS422A/485 *1	1:1	
		Q00CPU Q01CPU	RS-232C port on the CPU Module	RS-232C	1:1	
Mitsubishi Electric	Q/QnA Series	Q00CPU Q01CPU Q00JCPU Q02CPU Q02HCPU Q06HCPU Q12HCPU Q25HCPU Q03UDCPU Q03UDCPU Q06UDHCPU Q13UDHCPU	Serial Communications Module QJ71C24N-R2 QJ71C24N-R4 QJ71C24N	RS-232C, RS-485 (4-wire) *2	1:N	
		Q2ASCPU Q2ASCPU-S1 Q2ASHCPU Q2ASHCPU-S1	Serial Communications Module A1SJ71QC24N			
		F3SC23-1F	CPU built-in RS-232C port	RS-232C		
Yokogawa Electric	FA-M3(R) Series	#3SP21-0N #3SP28-3S #3SP58-6S #3SP67-6S	Personal Computer Link Module F3LC11-1F F3LC12-1F F3LC11-2F	RS-232C, RS-422A/485 *1	1:1	
Siemens	S7-300 Series	CPU313 CPU315-2DP CPU317-2PN/DP	SIMATIC S7 HMI Adapter 6ES7 972-0CA1□-0XA0	RS-232C	1:1	
Rockwell	SLC500	SLC5/03 SLC5/04 SLC5/05	RS-232C port on the CPU Module	RS-232C	1:1	
	MicroLogix	MicroLogix 1500	RS-232C port on the CPU Module	RS-232C	1:1	
(Allen-Bradley)	ControlLogix	Logix5555	RS-232C port on the CPU Module	RS-232C	1:1	
	CompactLogix	1769-L31	RS-232C port on the CPU Module	RS-232C	1:1	
	PLC-5	PLC-5/20	RS-232C port or RS-485 port on the CPU Module	RS-232C/RS-485 (4-wire)	1:N	


<sup>\*1.</sup> To connect using RS-422A/485, an RS-232C/422A converter (e.g. NS-AL002, CJ1W-CIF11) is required.
\*2. To connect using RS-485, an RS-232C/422A converter (e.g. NS-AL002, CJ1W-CIF11) is required.
Up to 32 sequencers can be connected when using RS-485.

## **Component Names and Options**


### **NS15**

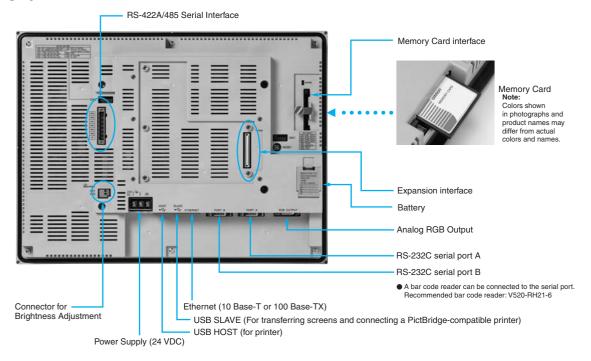


## NS12/10

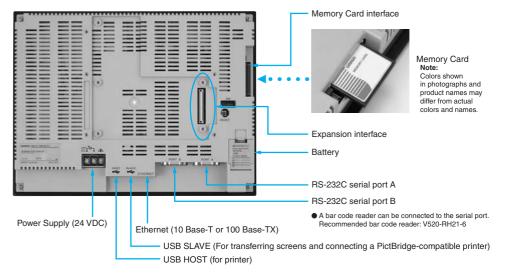


### NS8

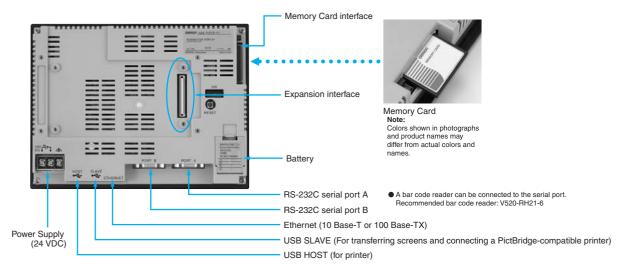

### NS<sub>5</sub>

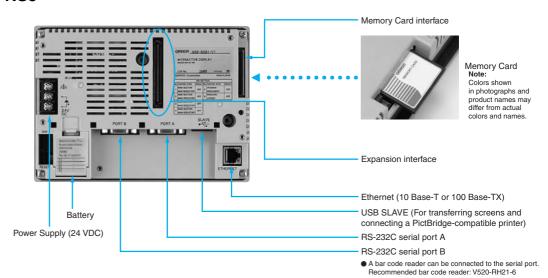

### NSH<sub>5</sub>

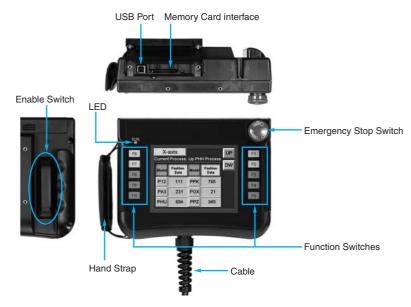

## **Optional Products**



Video Input Unit NS-CA001 (with Cover)



**RGB/Video Input Unit** NS-CA002 (with Cover)



Controller Link Interface Unit RS-422A Adapter NS-CLK21 (with Cover)



CJ1W-CIF11



RS-232C/RS-422A Conversion Unit NS-AL002



**Communications Cable** XW2Z-S002



Protective Cover/Anti-reflection Sheet for NS-series PT NS-KBA0 (N) NT30/NT31C-KBA05 (N)





**USB Serial Conversion Cable** CS1W-CIF31




USB relay cable (IP65 oil-proof type) NS-USBEXT-1M

### **Dimensions** (Units: mm) **NS15** Mounting Panel 13.95 Mounting Bracket

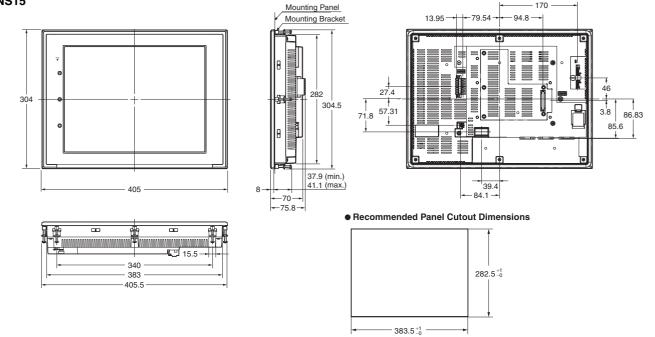


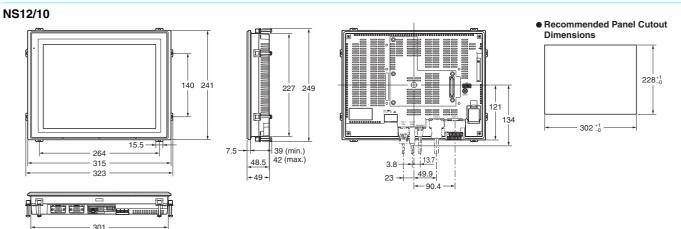

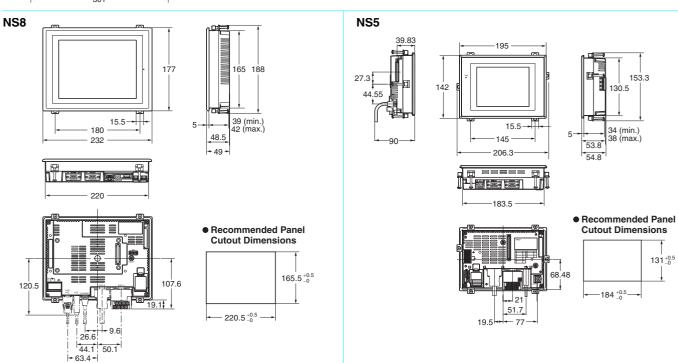


## **NS** Series


### Hand-held NS5

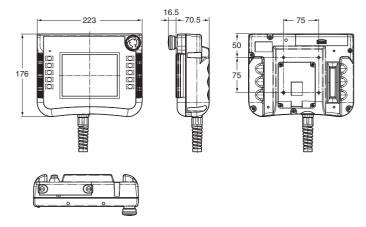


### NS-CA001 Video Input Unit

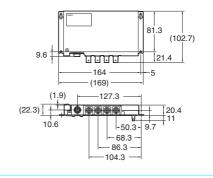

## NS-CA002 Video Input Unit

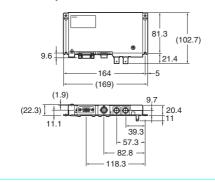

### NS-CLK21 Controller Link Interface Unit

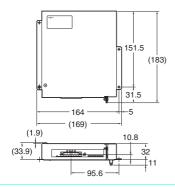

## **Related Manuals**

Cat. No.	Model	Manual
V083	NS15/NS12/NS10/NS8/NS5	NS-Series Programmable Terminals SETUP MANUAL
V073	NS15/NS12/NS10/NS8/NS5	NS-Series Programmable Terminals PROGRAMMING MANUAL
V099	NS-CXDC1-V3	CX-Designer Ver.3. ☐ USER'S MANUAL
V082	NS	NS-Series Ladder Monitor OPERATION MANUAL (Ladder Monitor I/O Comment Extracting Tool)
V086	NS-CA002	NS-Series RGB and Video Input Unit OPERATION MANUAL
V090	NSH5	NSH5-Series Hand-held Programmable Terminal OPERATION MANUAL
V098	NS15/NS12/NS10/NS8/NS5	NS-Series Programmable Terminals HOST CONNECTION MANUAL (Host Link) OPERATION MANUAL
V085	NS15/NS12/NS10/NS8/NS5	NS-Series Programmable Terminals HOST CONNECTION MANUAL
V092	NS15/NS12/NS10/NS8/NS5	NS-Series Programmable Terminals HOST CONNECTION MANUAL Multivendor Connection
V075	NS15/NS12/NS10/NS8/NS5	NS-Series Programmable Terminals Macro Reference
V093	NS-NSRCL□□	NS-NSRCL□□ NS-Runtime Software USERS MANUAL

### Read and Understand this Catalog

Please read and understand this catalog before purchasing the product. Please consult your OMRON representative if you have any questions or comments.

### Warranty and Limitations of Liability

#### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

#### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### **Application Considerations**

#### SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the product in the customer's application or use of the product.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used. Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### **PROGRAMMABLE PRODUCTS**

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

### **Disclaimers**

#### CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons. Consult with your OMRON representative at any time to confirm actual specifications of purchased product.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### **PERFORMANCE DATA**

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

Note: Do not use this document to operate the Unit.

## **OMRON Corporation** Industrial Automation Company

Tokvo, JAPAN

Contact: www.ia.omron.com

## Regional Headquarters OMRON EUROPE B.V.

Wegalaan 67-69-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

#### OMBON ASIA PACIFIC PTE, LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

### OMRON ELECTRONICS LLC

One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

### OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

#### **Authorized Distributor:**

© OMRON Corporation 2006 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

CSM\_5\_1\_1011 Cat. No. V405-E1-12

1011 (1206)